

INTEL & AMD 1 Heatsink set 散热器主体 x 1 2 Fan 风扇 x 2 3 Fan Screw 风扇螺丝 x 8 4 Case Screw 机箱螺丝 x 8 5 Back Plate 背板 x 1 6 Screw Bolt 螺柱 x 4 7 Nut A 螺丝A x 4 8 Nut B 螺丝B x 4 9 Thermal paste 导热膏 x 1 10 ADD-RGB Cable Controller ADD-RGB线控 x 1 11 ADD-RGB Extension cable A ADD-RGB延长线A x 1 12 ADD-RGB Extension cable B ADD-RGB延长线B x 1 13 ADD-RGB HUB ADD-RGB集线器 x 1 14 Fan Hub 风扇集线器 x 1 15 Fan Extension cable 风扇延长线 x 1										INTEL 16 INTEL Bracket INTEL转接架 x 2 17 LGA20XX Bolt 双头螺栓(LGA20XX) x 4			AMD 18 AMD Bracket A AMD转接架A x 1 19 TR4 Bolt 双头螺栓(TR4) x 4 20 AMD Bracket B AMD转接架B x 1			FAN HUB 14 Fan Hub 风扇集线器 x 1 15 Fan Extension cable 风扇延长线 x 1		
INTEL LGA1366 LGA115X 1. Back plate installation. 2. Heatsink and fan assembly installation. 3. Bracket installation.				INTEL LGA20XX 1. Bracket installation. 2. Heatsink and fan assembly installation. 3. Bracket installation.				AMD AM4, AM3+, AM3, AM2+, AM2, FM2+, FM2, FM1. Remove the back plate and heatsink/fan assembly.										

AM4 AMD 5. Back plate installation. 6. Bracket installation.		8. Heatsink and fan assembly installation.		20. AMD Bracket A installation. 18. AMD Bracket B installation.		7. Nut A installation. 8. Nut B installation.		1. Heatsink and fan assembly installation.		AMD TR4 19. TR4 Bolt installation. 20. AMD Bracket B installation.		7. Nut A installation. 8. Nut B installation.	
---	--	--	--	--	--	--	--	--	--	---	--	--	--

Fan & Radiator 风扇 & 散热排 1. Fan installation. 2. Radiator installation.		connection 接线 1. Fan Hub connection. 2. Fan LED connection. 3. Pump LED connection. 4. Fan Extension cable connection.		ADD-RGB 3PIN 1. ADD-RGB Hub connection. 2. ADD-RGB Cable Controller connection. 3. ADD-RGB Extension cable connection.				PSU SATA 10. Mode+ / Mode- connection. 11. GND / +5V connection. 12. GND / +5V connection.			
--	--	---	--	--	--	--	--	--	--	--	--