

Introduction: Thank you for deciding to purchase a be quiet! product. The following instructions will guide you through the installation process. If you do encounter installation problems, please don't hesitate to contact our customer services by mailing service@bequiet.com. Please note that be quiet! cannot accept liability for damage caused by compatibility problems.

Warranty:

- 3-year manufacturer guarantee for consumers (original purchase from authorized be quiet! dealers only)
- Guarantee work can only be processed with a copy included of the purchase receipt from an authorized be quiet! dealer
- Manipulation and structural changes of any kind, including any damage caused by external mechanical force, will lead to a complete voiding of the guarantee
- Our General Warranty Conditions apply, which can be viewed on bequiet.com

Listan GmbH & Co.KG . Biedenkamp 3a . 21509 Glinde Germany

For further information contact us via e-mail: service@bequiet.com



PURE ROCK

! We recommend removal of the cooler prior to transportation.

Glinde, 05/2018



PURE ROCK

be quiet!®

SCOPE OF DELIVERY

	Part name	Quantity
①	be quiet! Pure Rock CPU cooler	1
②	120mm fan	1
③	Intel backplate	1
④	Intel mounting brackets	2
⑤	Long AMD mounting brackets	2
⑥	Cooler mounting bridge	1
⑦	Intel spacer nuts	4

	Part name	Quantity
⑧	Intel 115X/1366 nuts	4
⑨	AMD spacer nuts	4
⑩	Mounting bracket fastening screws	4
⑪	Intel/AMD mounting bridge fastening screws	2
⑫	Intel backplate screws	4
⑬	AMD backplate screws	4
⑭	O-rings	4
⑮	Fan clips	2
⑯	AM3 washers	4

Intel LGA 2011(-3) square ILM / LGA 2066




General
We recommend preparatory mounting of the cooler outside the PC case for subsequent installation.

The following parts are needed for this:
1x Pure Rock CPU cooler (1), 1x 120mm fan (2), 2x Intel mounting brackets (4), 1x cooler mounting bridge (6), 4x Intel spacer nuts (7), 4x mounting bracket fastening screws (10), 2x Intel/AMD mounting bridge fastening screws (11), 2x fan clips (15)




Assembly of the cooler mounting frame
First screw the Intel spacer nuts (7) onto the threads of the socket frame. Place the Intel mounting brackets (4) over the Intel spacer nuts and screw these tight with the mounting bracket fastening screws (10). You can use any cross-tip screwdriver for this.

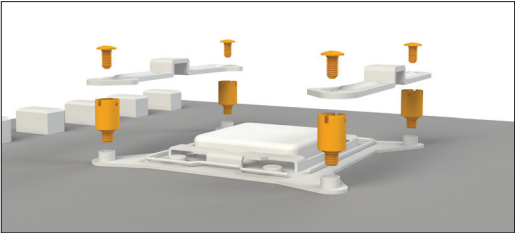


Mounting the CPU cooler
The protective covering on the underneath of the cooler must be removed prior to installation against the CPU.


Caution: The thermal paste is not suitable for human consumption. If swallowed, drink lots of water and urgently seek medical attention. Keep it out of the reach of children. Avoid contact with skin and eyes.

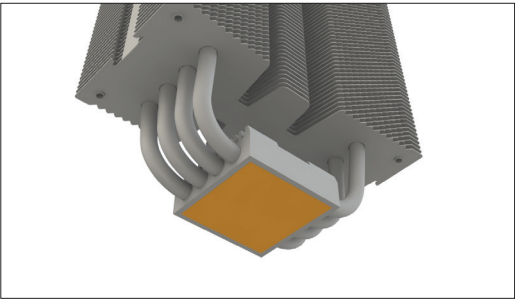

Position the cooler mounting bridge (6) centrally on the cooler (1). Next place the cooler unit onto the CPU. Insert the Intel/AMD mounting bridge fastening screws (11) from above into the cooler mounting bridge and then screw these alternately tight.

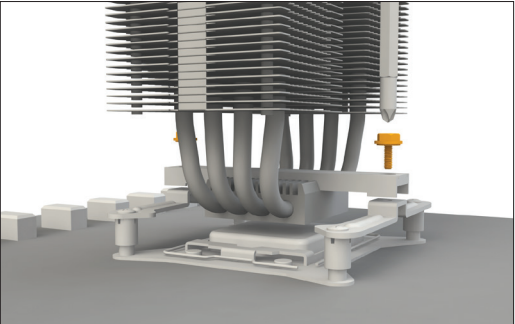

Fasten the 120mm fan (2) onto the cooler unit (1) using fan clips (15). Connect the fan to the motherboard's PWM signal.

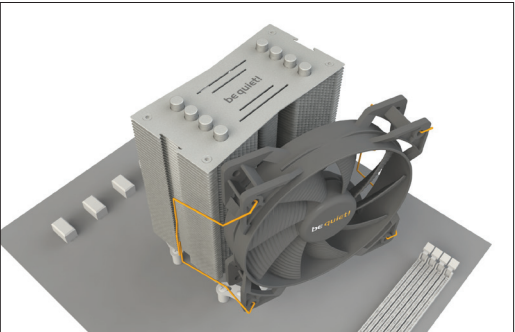

When dismantling the fan (2), push the notches of the fan clips (15) away from the fan.


Intel LGA 1150 / 1151 / 1155 / 1156 / 1366




General
We recommend preparatory mounting of the cooler outside the PC case for subsequent installation.

The following parts are needed for this:
1x Pure Rock CPU cooler (1), 1x 120mm fan (2), 1x Intel backplate (3), 2x Intel mounting brackets (4), 1x cooler mounting bridge (6), 4x Intel 115X/1366 nuts (8), 4x mounting bracket fastening screws (10), 2x Intel/AMD mounting bridge fastening screws (11), 4x Intel backplate screws (12), 4x O-rings (14), 2x fan clips (15)


Mounting the backplate
Position the Intel backplate screws (12) in the notches situated on the rear side of the Intel backplate (3). Pay attention in so doing to align with the holes drilled for each socket.

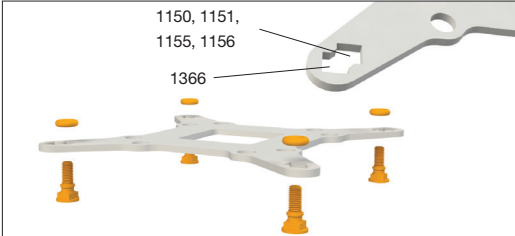


For fixing the backplate screws onto the Intel backplate use the O-rings (14). Once assembly of the Intel backplate for the respective Intel socket has been completed, position it under the motherboard. In so doing make sure that the backplate screws are precisely located within the motherboard holes.

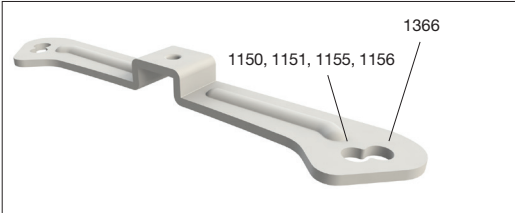

Installation of the mounting brackets
Screw the Intel 115X/1366 nuts (8) onto the previously positioned Intel backplate (3). Then position the Intel mounting brackets (4) over the Intel 115X/1366 nuts (8) and affix these with the mounting bracket fastening screws (10). You can use any cross-tip screwdriver for this.

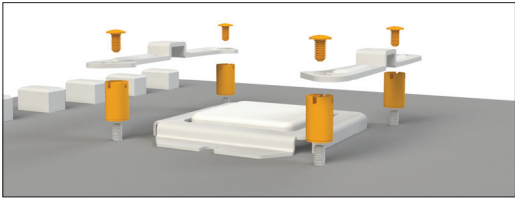


Mounting the CPU cooler
The protective covering on the underneath of the cooler must be removed prior to installation against the CPU.

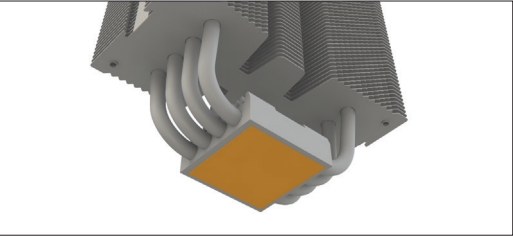


Caution: The thermal paste supplied is not suitable for human consumption. If swallowed, drink lots of water and urgently seek medical attention. Keep it out of the reach of children. Avoid contact with skin and eyes.

Position the cooler mounting bridge (6) centrally on the cooler (1). Next place the cooler unit onto the CPU. Insert the Intel/AMD mounting bridge fastening screws (11) from above into the cooler mounting bridge and then screw these alternately tight. You can use any cross-tip screwdriver for this.

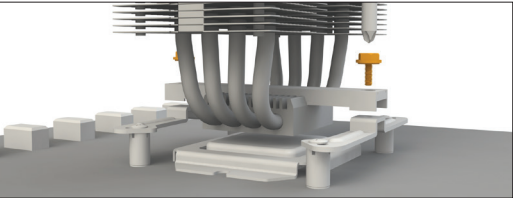


Fasten the 120mm fan (2) onto the cooler unit (1) using fan clips (15). Connect the fan to the motherboard's PWM signal.

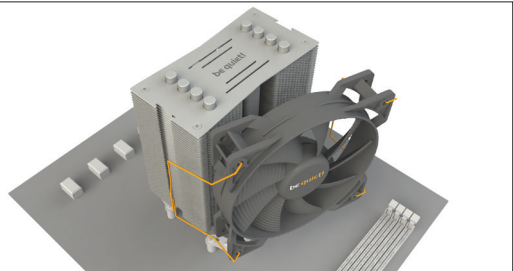


When dismantling the fan (2), push the notches of the fan clips (15) away from the fan.

We recommend preparatory mounting of the cooler outside the PC case for subsequent installation.


1x Pure Rock CPU cooler (1), 1x 120mm fan (2), 2x long AMD mounting brackets (5), 1x cooler mounting bridge (6), 4x AMD spacer nuts (9), 2x Intel/AMD mounting bridge fastening screws (11), 4x AMD backplate screws (13), 2x fan clips (15), 4x AM3 washers (16)

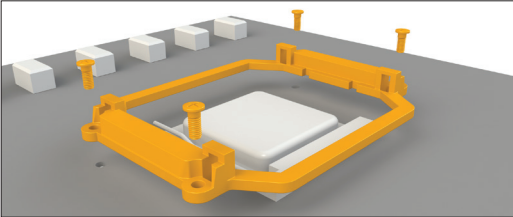


Note: To mount the Pure Rock (1) on an AM3 motherboard, please use the four AM3 washers (16), placing these below the backplate bolts protruding through the front side of the motherboard.

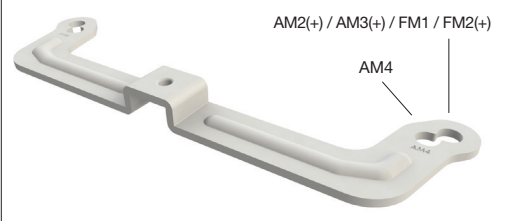

Place the four AMD spacer nuts (9) onto the backplate bolts protruding through the front side and affix both long AMD mounting brackets (5) with the AMD backplate screws (13).

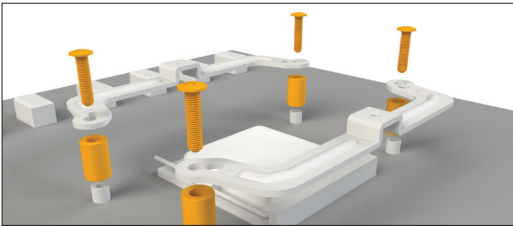


The protective covering on the underneath of the cooler must be removed prior to installation against the CPU.

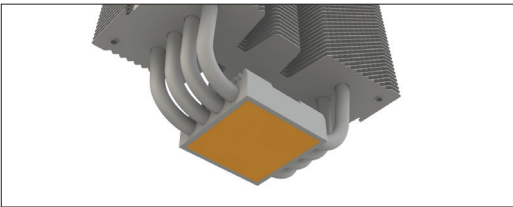


Caution: The thermal past supplied is not suitable for human consumption. If swallowed, drink lots of water and urgently seek medical attention. Keep it out of the reach of children. Avoid contact with skin and eyes.

Position the cooler mounting bridge (6) centrally on the cooler (1). Next place the cooler unit onto the CPU. Insert the Intel/AMD mounting bridge fastening screws (11) from above into the cooler mounting bridge and then screw these alternatively tight. You can use any cross-tip screwdriver for this.

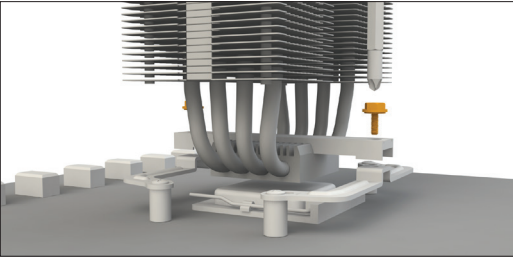

Fasten the 120mm fan (2) onto the cooler unit (1) using fan clips (15). Connect the fan to the motherboard's PWM signal.

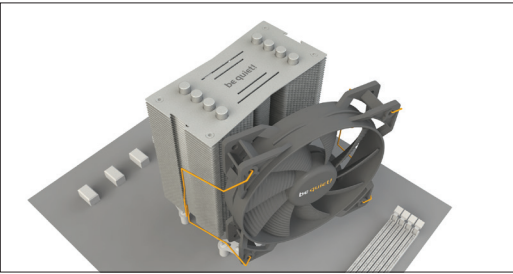

When dismantling the fan (2), push the notches of the fan clips (15) away from the fan.

As per the terms and conditions of this limited warranty as given below, be quiet! warrants its new products to be free of defects resulting from faulty materials and faulty manufacturing for the length of the warranty period.

This non-transferable warranty is applicable to newly purchased, previously unopened be quiet! products and is enforceable by only the original consumer purchaser. Proof of purchase is required for warranty service, so should be retained. be quiet! does not provide warranty registration services.

For eligible products, parts and labor are warranted for the applicable warranty period from the date of purchase. The applicable warranty period varies by product model, and is identified in your user documentation, on the product package, or as listed below. Should any of these warranty periods differ, the longest specified warranty period will apply. Replaced products will be warranted for the remainder of the original warranty period or thirty days, whichever is longer.

The following are not covered by the warranty:

1. Normal wear and tear.
2. Any product which has been modified without permission from be quiet!, or on which the serial number or warranty sticker has been defaced, modified, or removed.
3. Damage, deterioration or malfunction resulting from:
Accident, abuse, misuse or improper use, neglect, connection to an improper voltage source, unauthorized product modification, or failure to follow instructions included with the product.
Fire, water, lightning, or other acts of nature.
Repair or attempted repair by anyone not authorized by be quiet!.
Shipping or transport damage (claims must be made with the carrier).
Any other cause which does not relate to a defect in materials or manufacturing workmanship.
4. Cartons, cases, batteries, cabinets, tapes, accessories or other consumables used with this product.
5. be quiet!, Inc. does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
6. Removal or installation charges.
7. Shipping charges.
8. Any incidental charges.

be quiet)'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option. be quiet! shall not, in any event, be liable for any special, incidental, indirect, or consequential damages whatsoever, including but not limited to loss of profits, revenue, or data (whether direct or indirect), damages resulting from interruption of service and loss of business, or for liability in tort relating to this product or resulting from its use or possession, even if be quiet! has been advised previously of the possibility of such damages.

There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. The duration of implied warranties is limited to the warranty length specified in Paragraph II.50

This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

No be quiet! employee, dealer, or other agent is authorized to make any modification, extension, or addition to this warranty.

Please see your product owner's manual or visit the service section at www.bequiet.com for details and contact information. You will need to provide proof of purchase for warranty service.