COOLER MASTER

USER MANUAL

01. Controller Description

Front Back Left Right

SATA POWER

A4
A3
A2
A1

CASE RESET
MB RESET
R1
MB ADD 5V USB MB 12V

Top Bottom

02. Left Side Functions

→ Reserved Slot

① → Mirage Effect (Software Required)

② → Case IO Panel Reset Port

③ → Motherboard Reset Port (Connect using cable included)

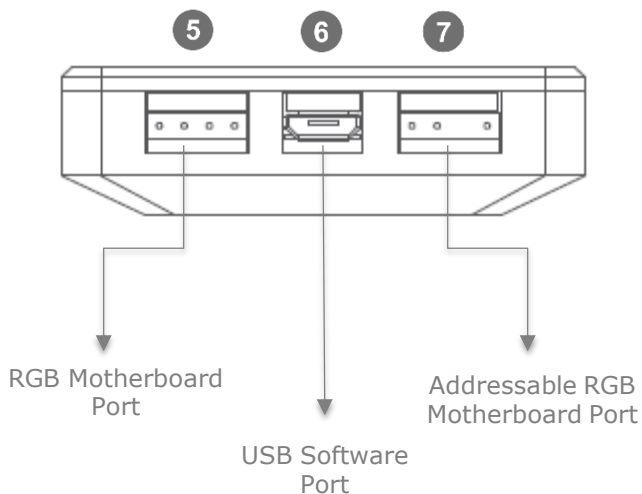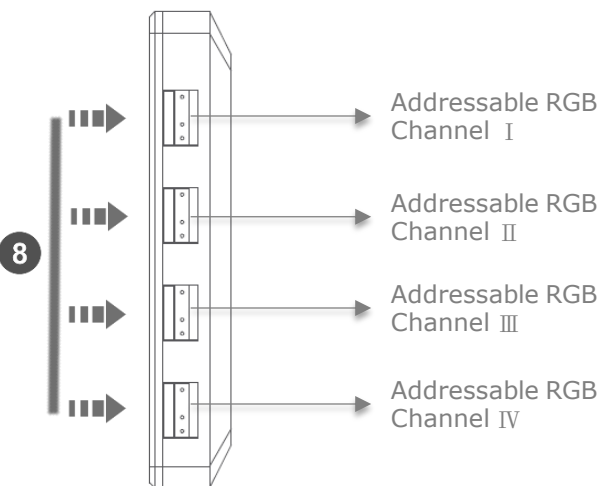**④** → Fan RGB Port
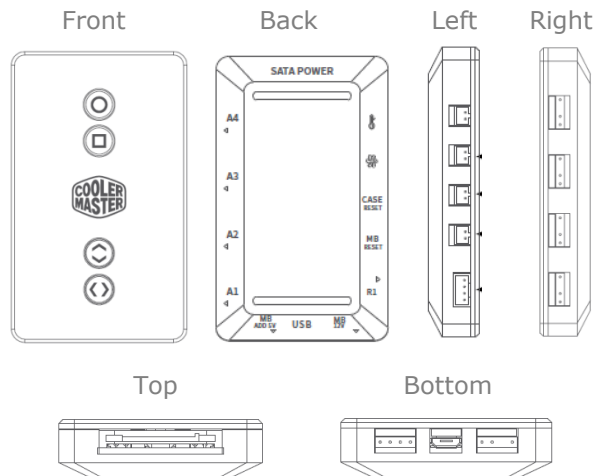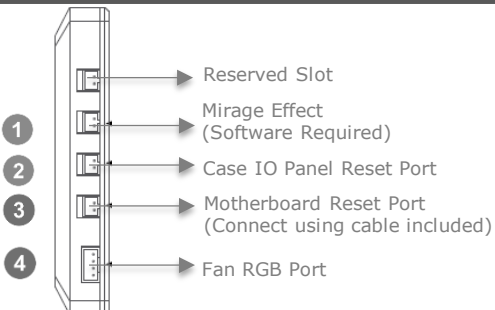
When ② & ③ Plugged in: The Reset Button on the Case IO Panel can be used to switch between LED modes. Press and Hold for 5 secs to restart your computer
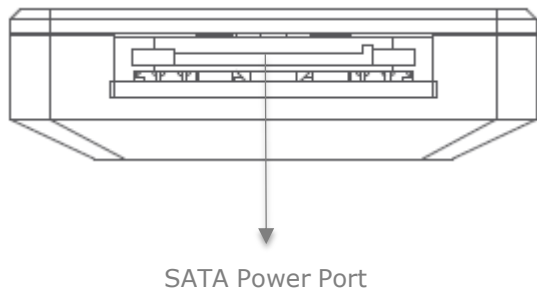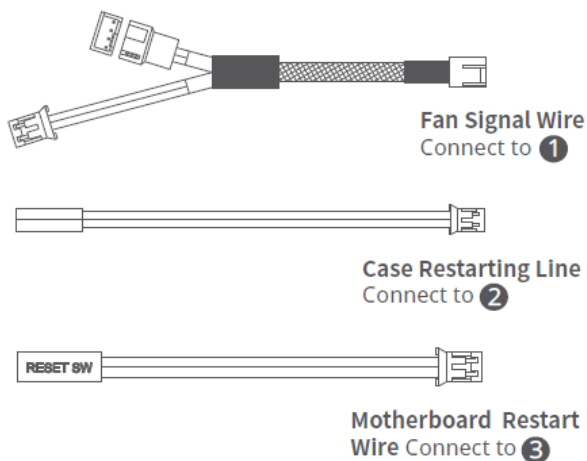
03. Bottom Functions

⑤   **⑥**   **⑦**

RGB Motherboard Port

USB Software Port

Addressable RGB Motherboard Port

04. Right Side Function

→ Addressable RGB Channel Ⅰ

→ Addressable RGB Channel Ⅱ

⑧ → Addressable RGB Channel Ⅲ

→ Addressable RGB Channel Ⅳ

05. Top Function

SATA Power Port

06. Wire Instruction（At Your Choice）

Fan Signal Wire Connect to **①**

Case Restarting Line Connect to **②**

RESET SW

Motherboard Restart Wire Connect to **③**

07. Wire Instruction（At Your Choice）

RGB 4-Pin Connector
Connect to ❹

RGB 4-Pin Motherboard Connector
Connect to ❺

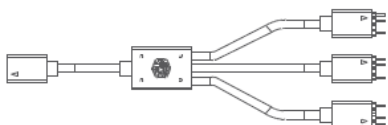**USB Header Connector**
Connect to the motherboard USB port

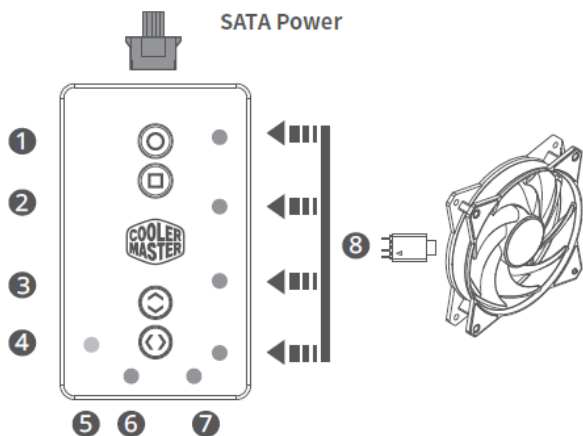## 08. Wire Instruction（At Your Choice）

USB Adapter
Connect to ❻

— GIGABYTE

ASUS
MSI
ASROCK
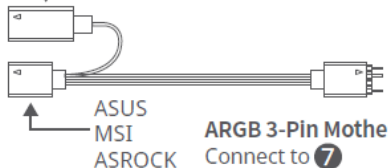
ARGB 3-Pin Motherboard Connector
Connect to ❼

One to Three ARGB Connector
Connect to ❽

09. Basic Installation Diagram

SATA Power
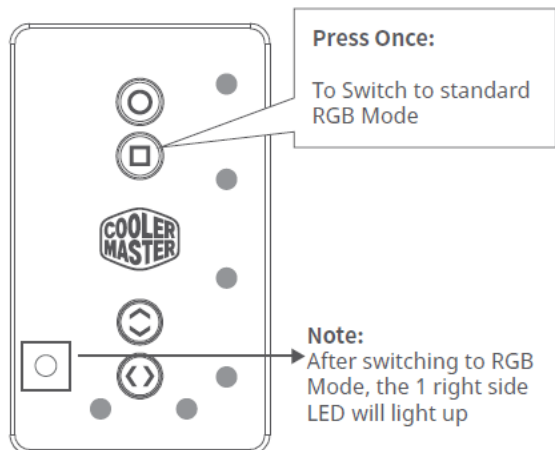
❶
❷
❸
❹
❺ ❻ ❼
❽

Note:
This basic connection method can control the ARGB light.

10. Key Function Description

LED Mode
Adjustment Button

RGB & ARGB
Mode Button

LED Color
Adjustment
Button

Mirage Effect
Adjustment
Button

11. Addressable RGB/RGB Mode

Press Once:

To Switch to standard RGB Mode

Note:
After switching to RGB Mode, the 1 right side LED will light up

12. Addressable RGB/RGB Mode

Press Again:

To switch back to Addressable RGB mode