



Truck Mount Installation Instructions


1. Following the installation diagram attach the left and right fixing plates to the middle mount frame using the supplied M6X12 screws, spring washers and flat washers.

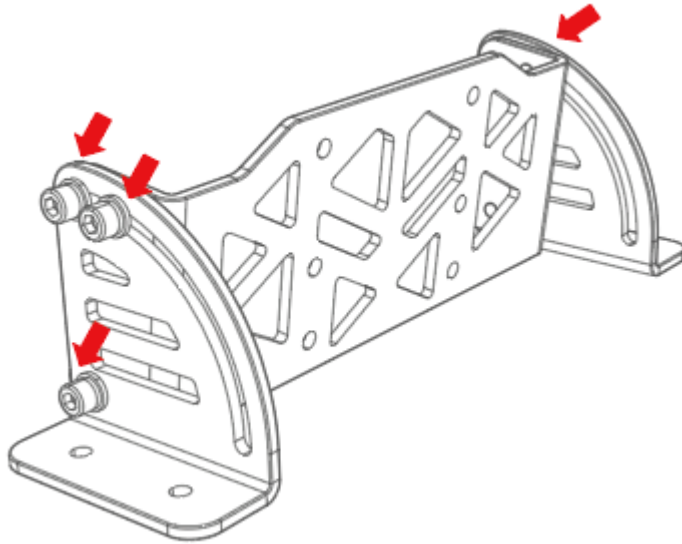


2. Attach the base to the mount using the supplied 4 x M6x12 screws and include a flat washer if needed for optimal tightening.

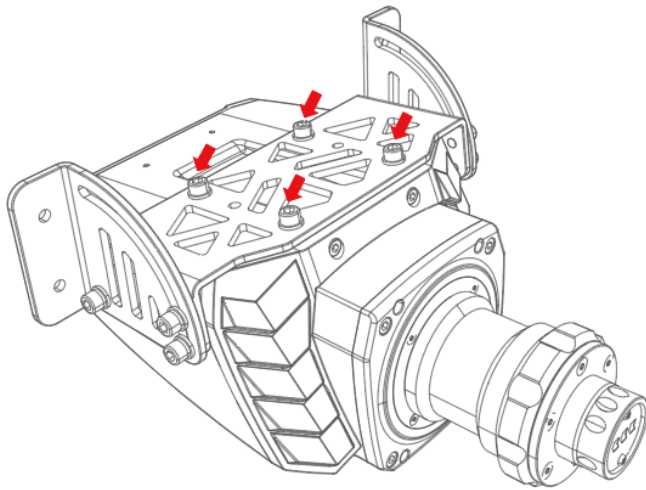

3. Attach the clamp brackets to the mount using 4 M6x12 screws with a spring washer and flat washer at a suitable height for your desk or profile rig. Fit the assembly to your rig or desk and fully clamp until secure using the star shaped clamp screw handles.

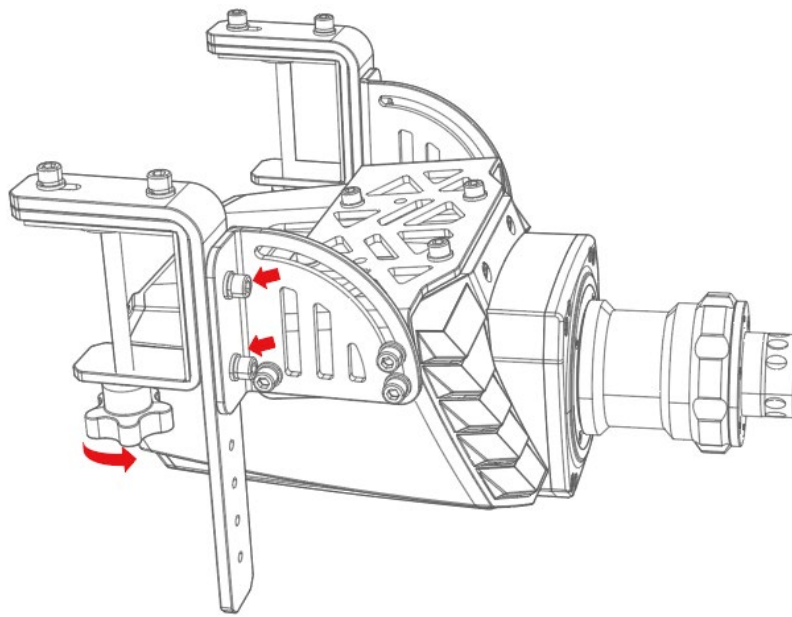

4. The height and rake angle are fully adjustable to accommodate different tabletop heights and driving preferences.

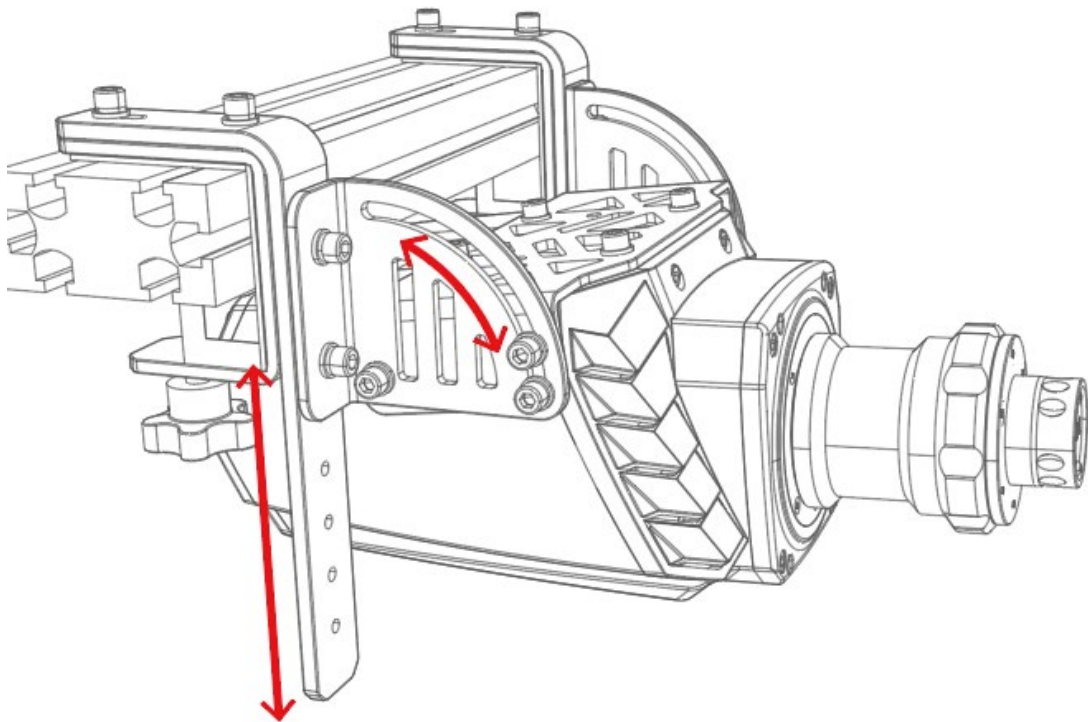

1.