



### **Box Contents**


- Prodigy M Case
- Prodigy M Quick Installation Guide
- o Accessories:
  - → ODD Bay Screw Brackets: x 2
  - → USB 3.0 to 2.0 Apdater
  - → HDD Anti-vibration Washers x 4
  - → Motherboard Standoff grip tool: x 1 (For loosening/tightening MB standoffs)
- o Screws:

  - → Motherboard Standoffs: x 9 (For MB)
  - → Thumbscrews M3: x 2 (For ODD)

  - → Standard Screw 6-32 Hex: x 4 (For PSU)
  - \* Contents and specifications subject to change without notice.






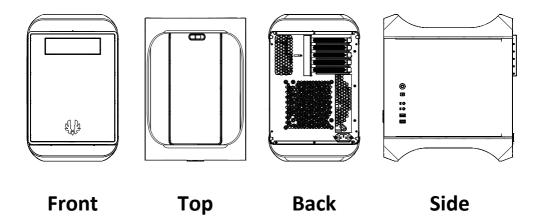


### **Basic Installation**

### Removing side panels

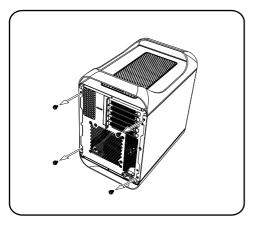

a. Remove thumbscrews

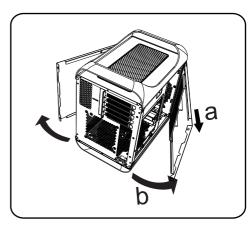


b. Remove side panels







## Installing 5.25" drives

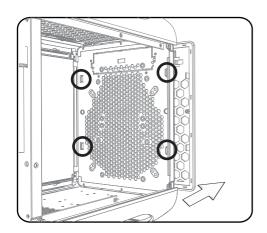


a. Remove front panel by pushing tabs from inside chassis

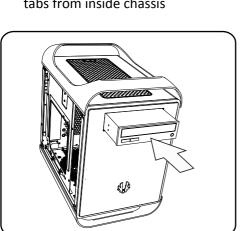

c. Slide drive into drive bay

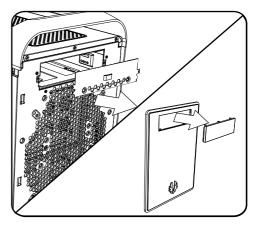

b. Remove ODD bay blank and drive bay cover from front panel

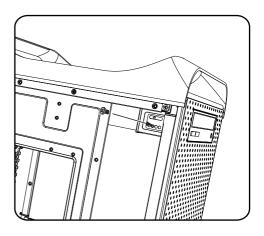


d. Secure with screws (Thumbscrews M3)







## **Installing 3.5" drives**

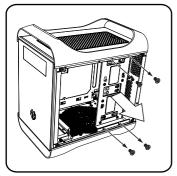


a. Remove hard disk tray

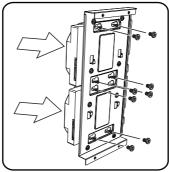


b. Install drives using 6\*6mm Round screws

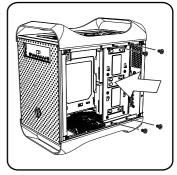

c. Secure hard disk tray with screws

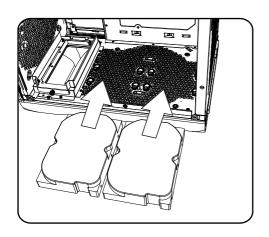

a. Put drives into place

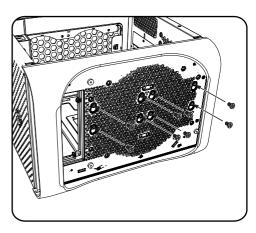


b. Install drives using 6\*6mm Round screws (install heat shield if necessary)







# Installing 2.5" drives

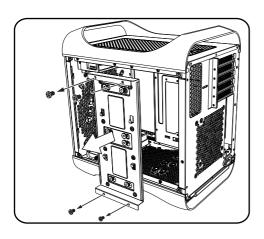


a. Remove hard disk tray by removing screws

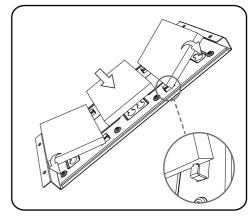

b. Install drives

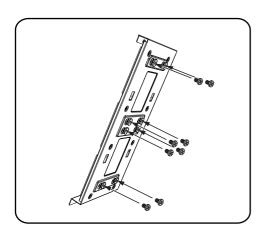

c. Secure with screws(M3\*5mm Round screws)

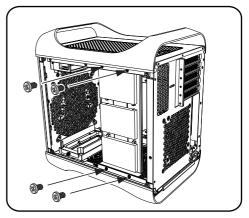



d. Install tray into place






# Installing 2.5" drives

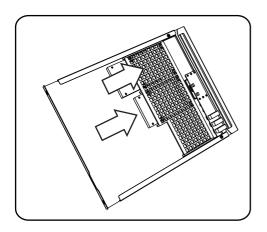



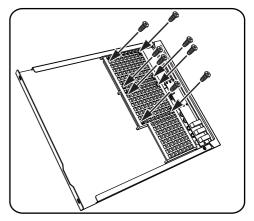

b. Secure with screws (M3\*5mm Round)





# Features Control Panel



- **B** R
- C [ O


E

- A. Power button
- **B.** Reset button
- C. Headphone jack
- D. Microphone jack
- E. SuperSpeed USB3.0 ports







## **Top Fan Installation (120mm)**

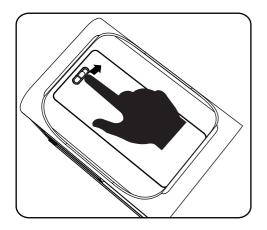


a. Remove top filter

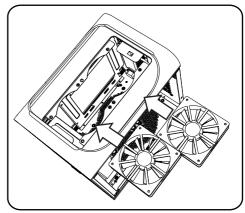

b. Install fans

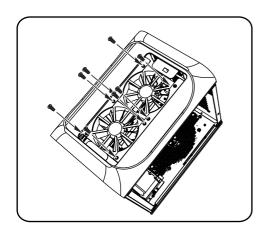

c. Secure with screws

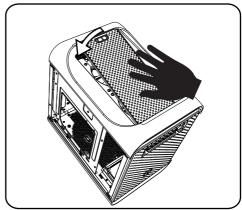


d. Replace top filter






## **Bottom Fan Installation (120mm)**

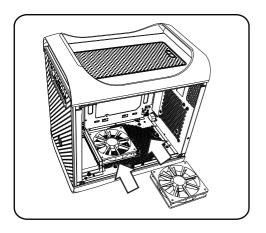


a. Install fans

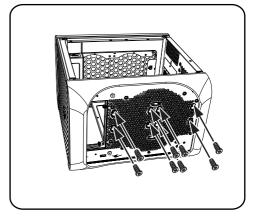


b. Secure with screws (Remove heat shield if installed)

### **Bottom Fan Installation (230mm)**

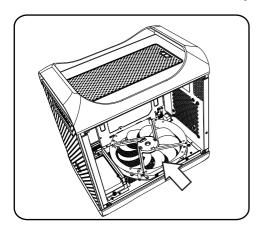

a. Install fans

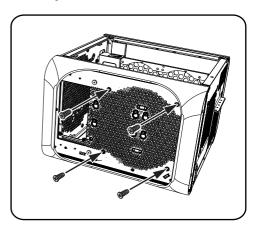



b. Secure with screws (Remove heat shield if installed)





## **Rear Fan Installation**

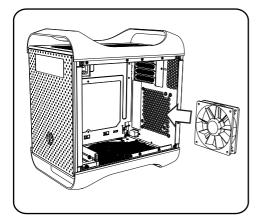

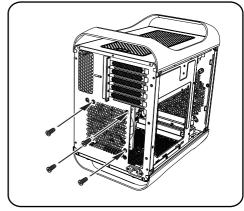


a. Install fan

b. Secure with screws







#### **PSU Installation**

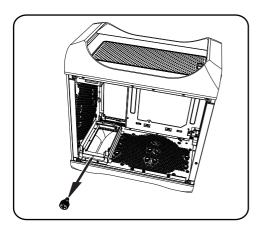


a. Remove thumbscrew

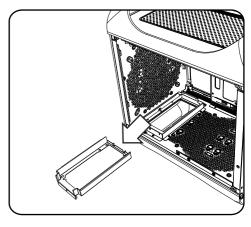

b. Remove PSU bracket

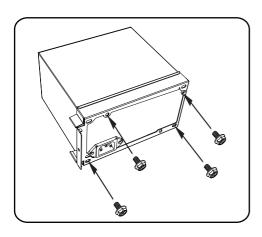

c. Secure PSU with screws (Standard screw 6-32 hex)

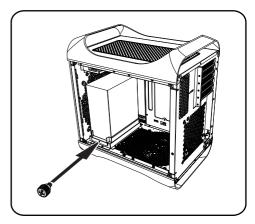


d. Secure with thumbscrew







## **Replacing ODD bay blank**

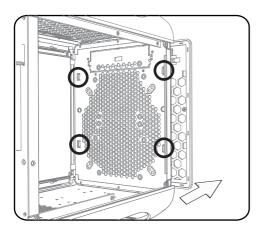


a. Remove front panel by pushing tabs from inside chassis

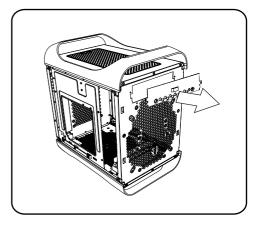

b. Remove ODD bay blank from front panel

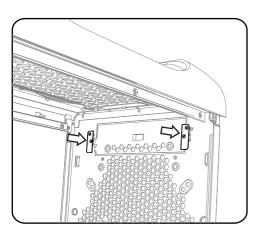

c. Position ODD bay screw brackets and ODD bay blank

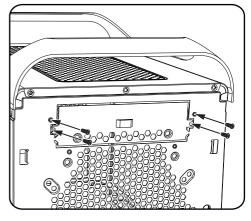

d. Secure with screws (6-32\*6mm Flat)







Bitfenix Co., Ltd.

3F, No.79, Sec. 1, Xintai 5th Rd.,

Xi Zhi District, New Taipei City, Taiwan, R.O.C.

For the most updated information, please visit our official website: http://www.bitfenix.com

© 2013 BITFENIX Co., Ltd. All Rights Reserved. All trademarks are registered to their respective owners.

Ver 1.0 : 2013/09



