



ASSEMBLY + INSTALLATION MANUAL

MOTORIZED CURTAIN RAIL

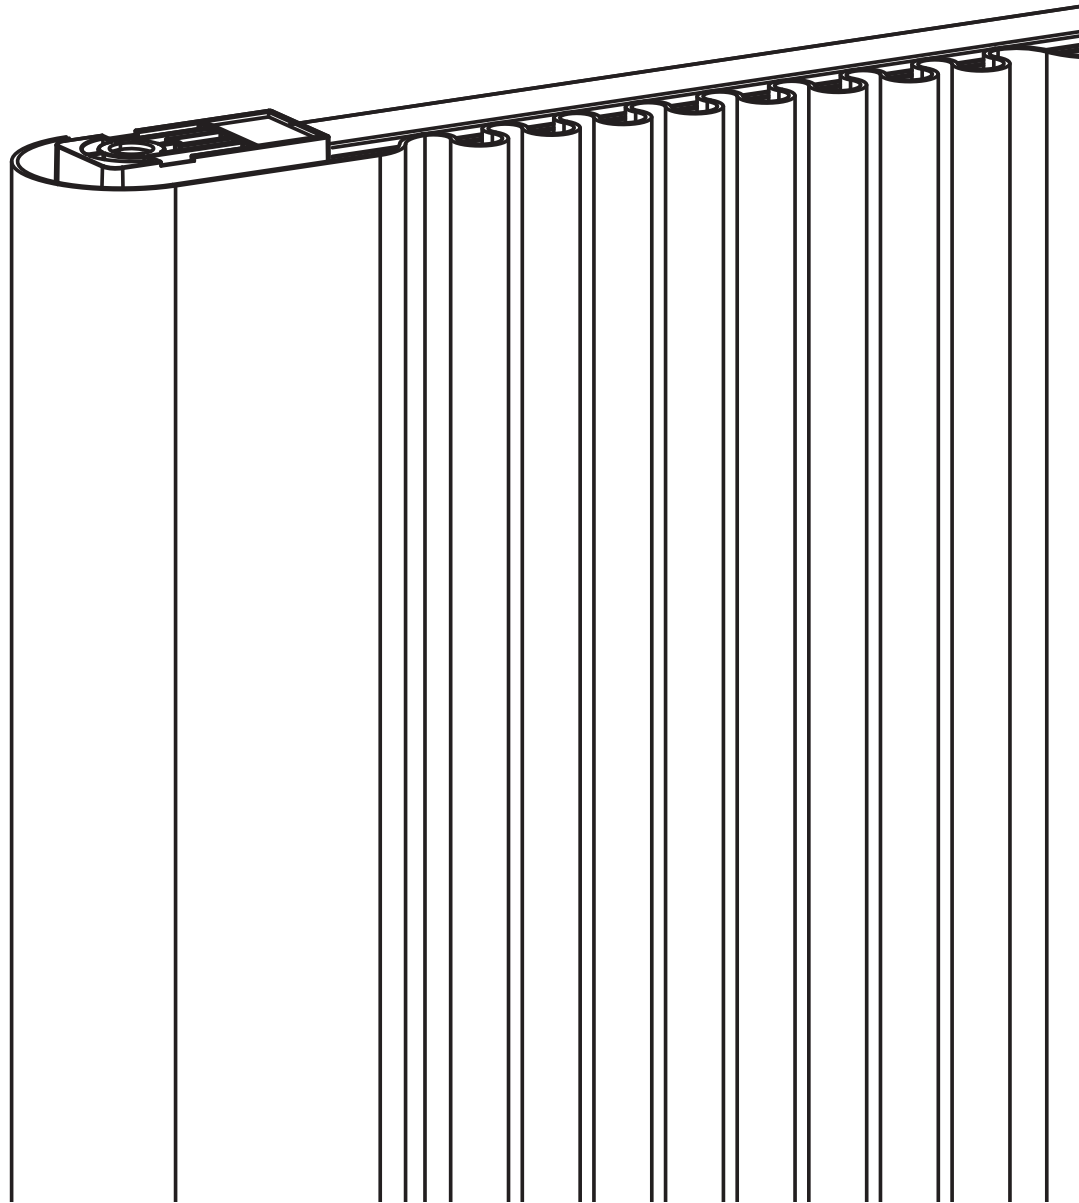





A

L



R

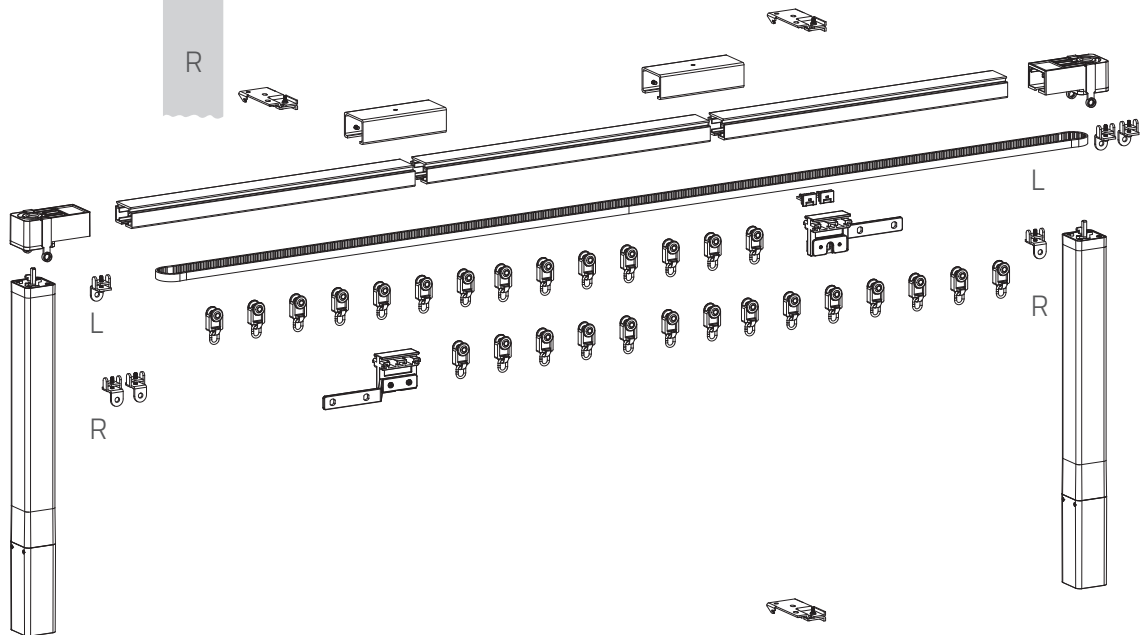


B

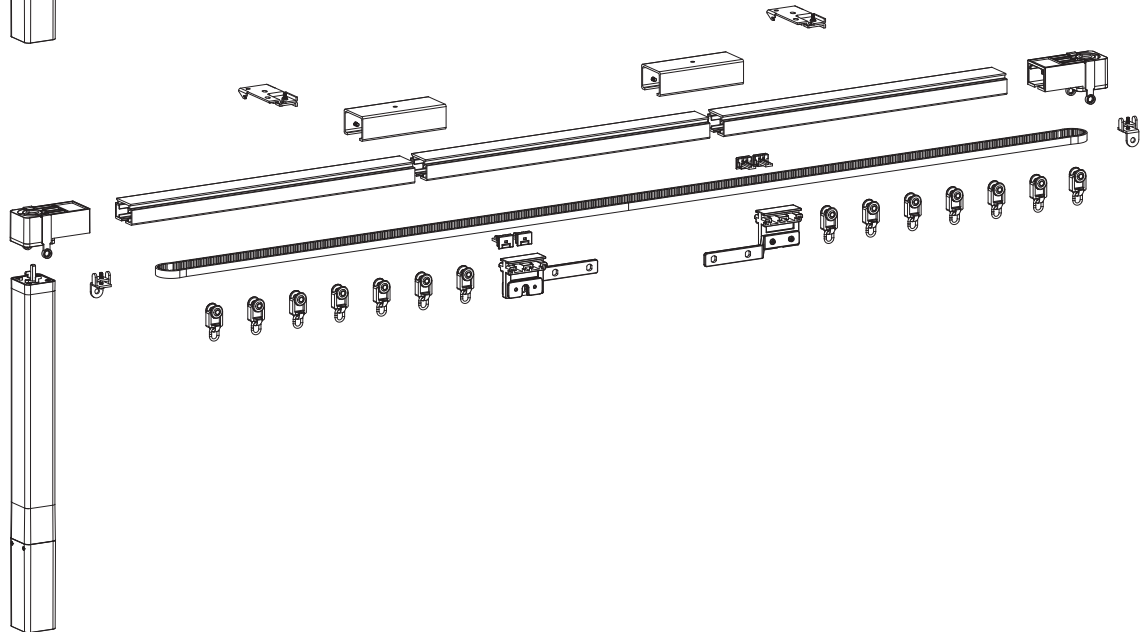


360 cm	5x	720 cm	3 x 115 cm	2	3	2	4	2	51
475 cm	6x	950 cm	4 x 115 cm	3	3	2	4	2	68

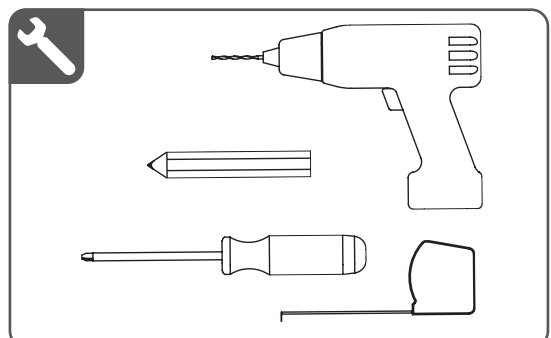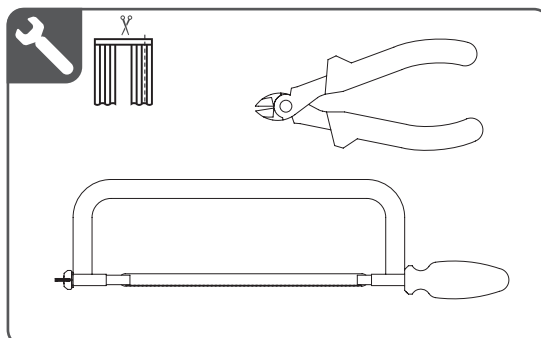

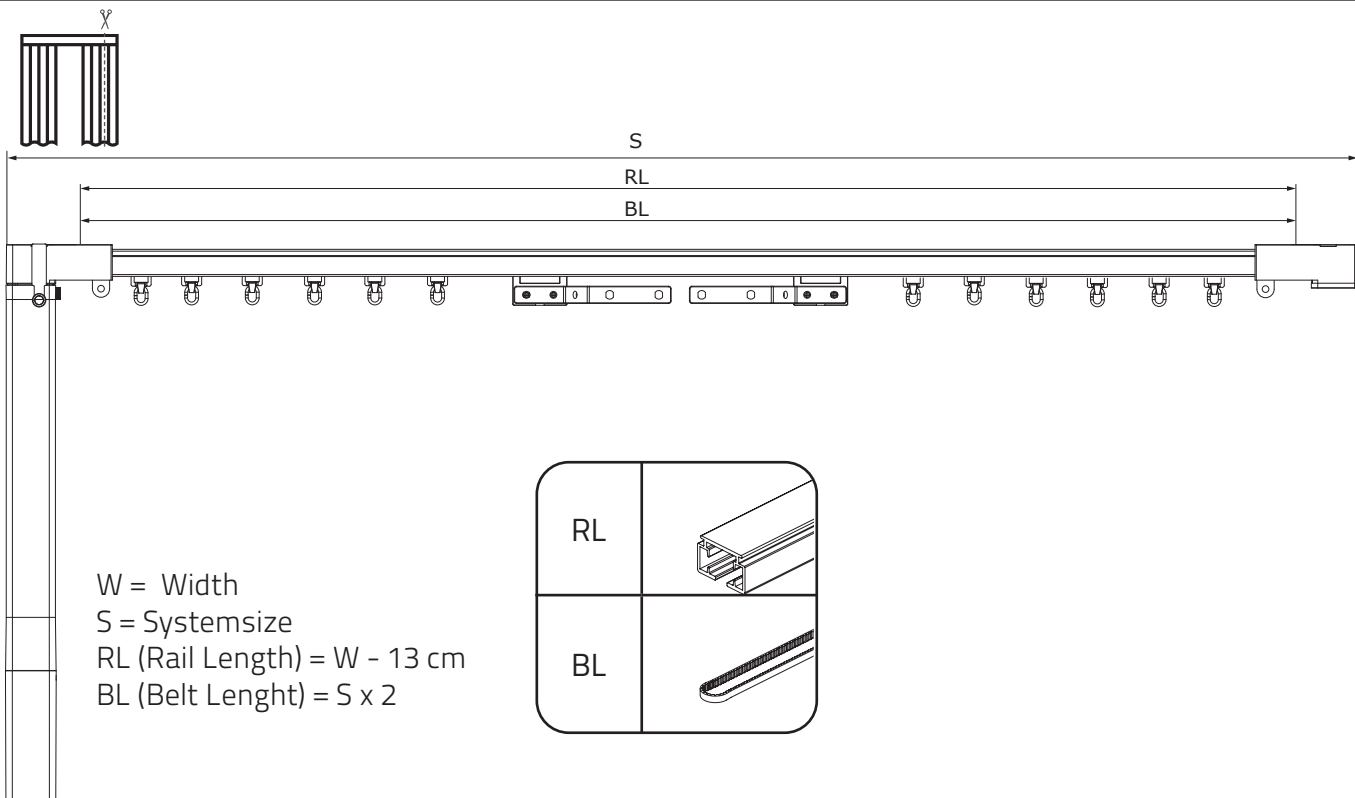


Inside mount


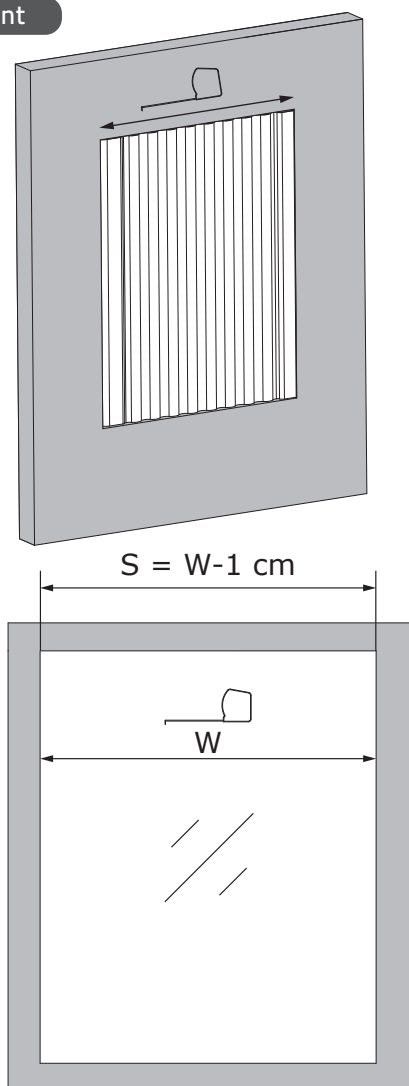


S = Systemsize
 S = W - 1 cm = __, __ cm

Outside mount

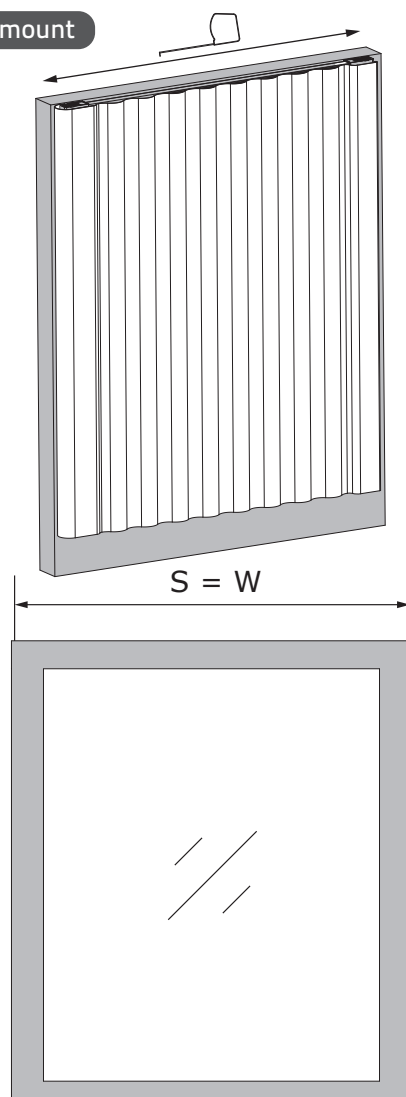


S = Systemsize
 S = W = __, __ cm

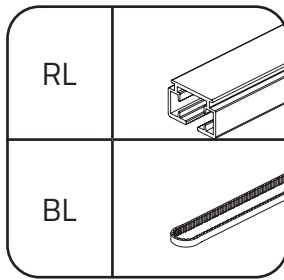


S = Systemsize = __, __ cm

RL (Rail Length) = S - 13 cm = __, __ cm (Total rail length)

BL (Belt Length) = S x 2 = __, __ cm

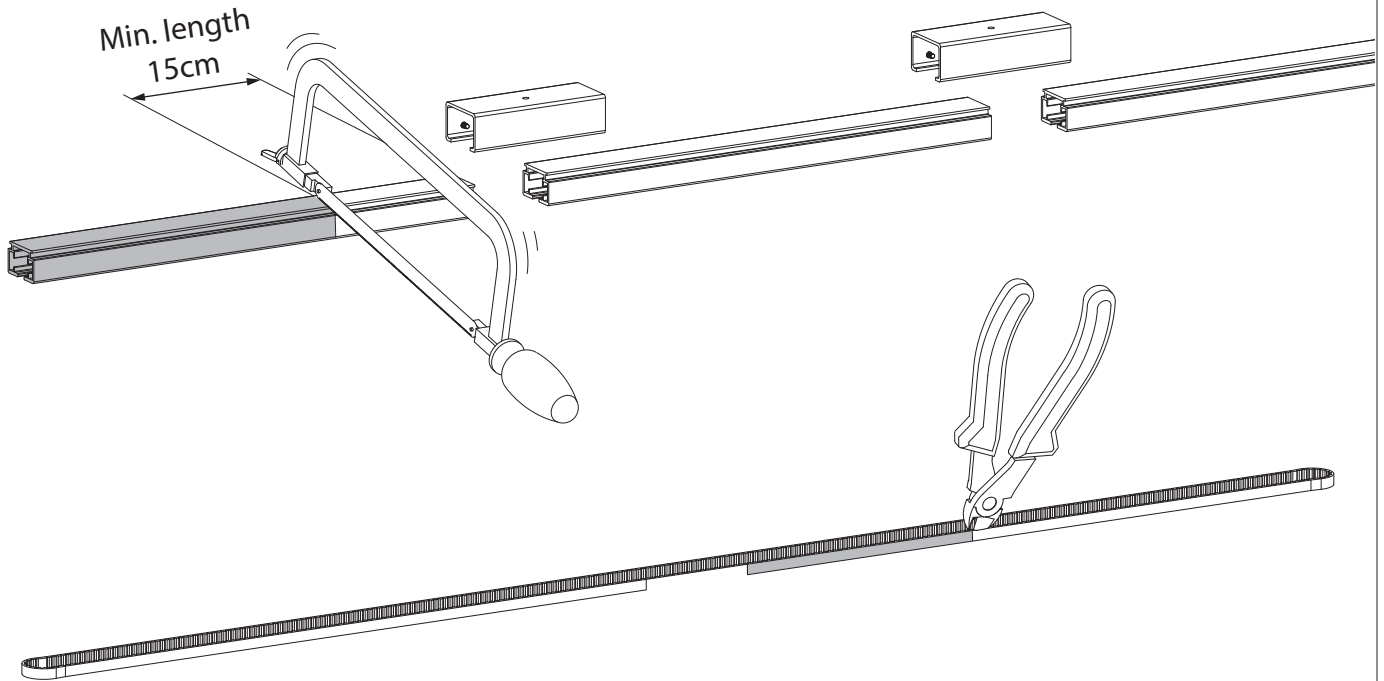

1

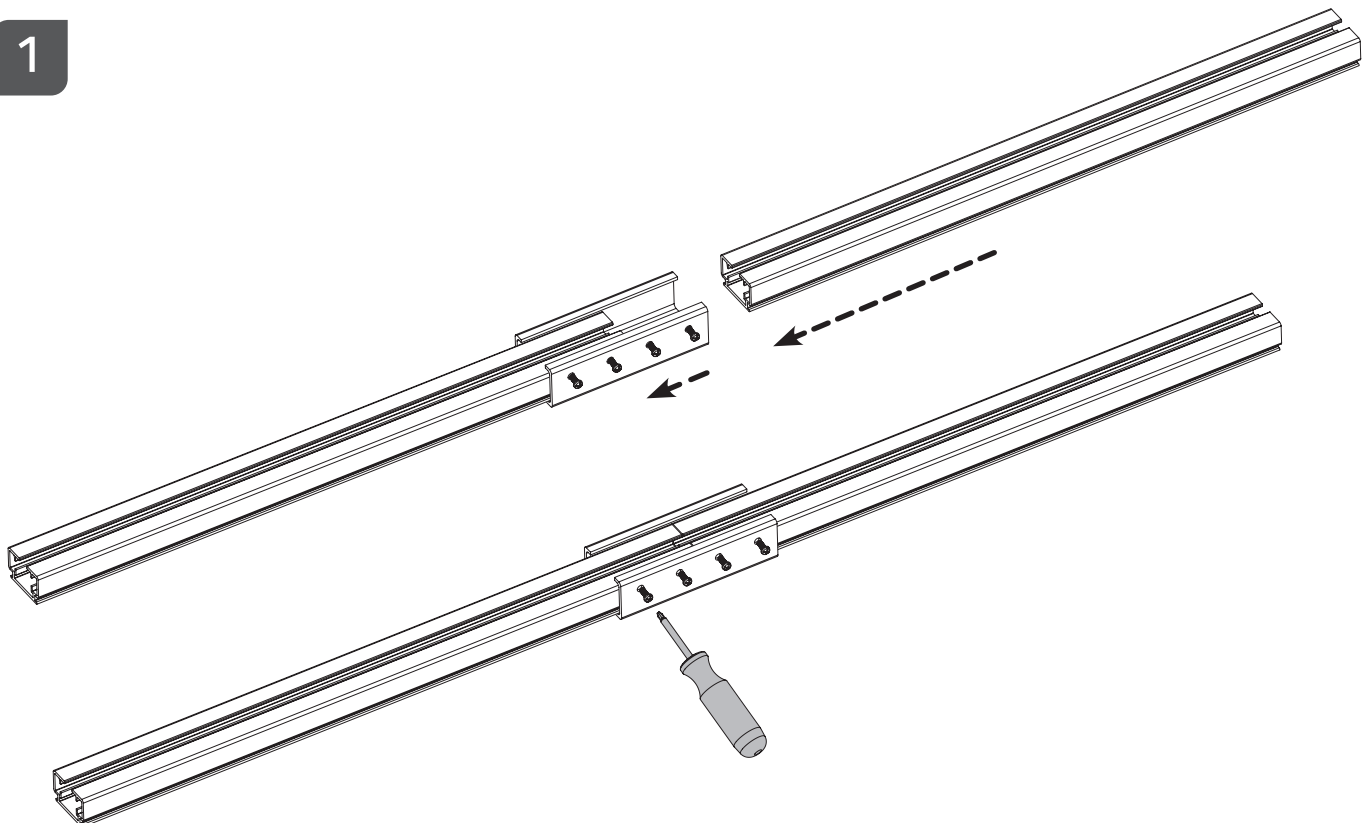

A




= 2 x

B





= 2 x

= 2 x

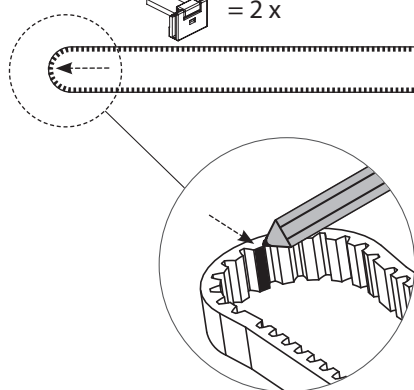


2

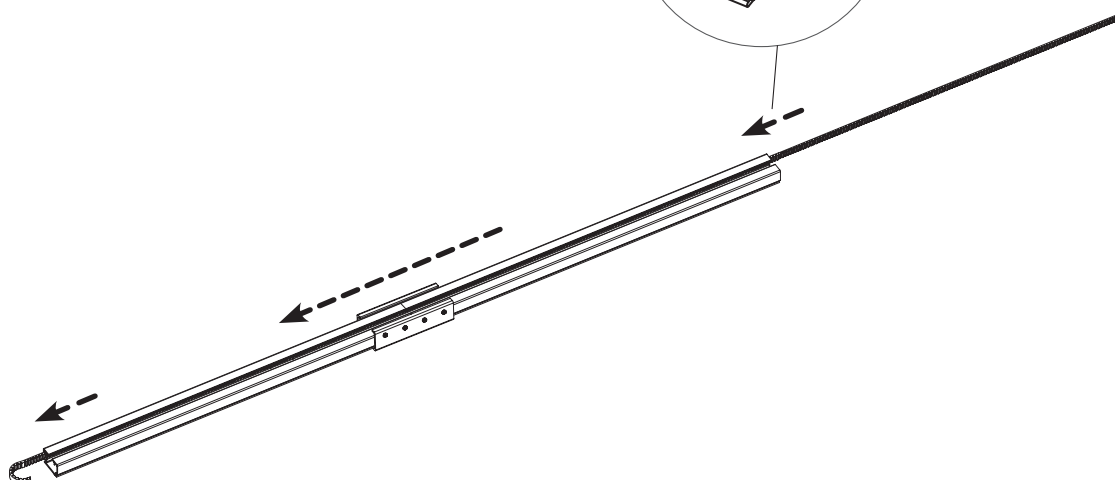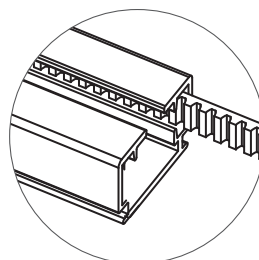


3




1

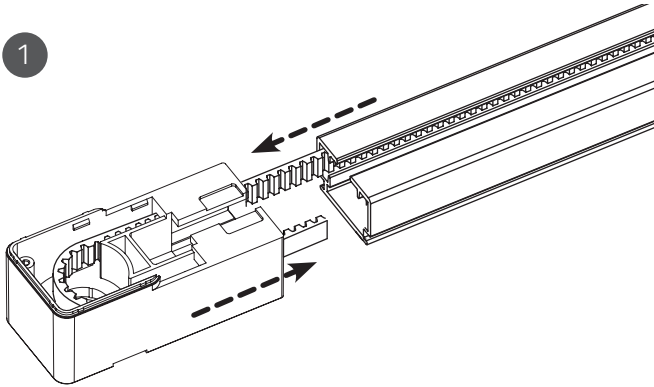


2

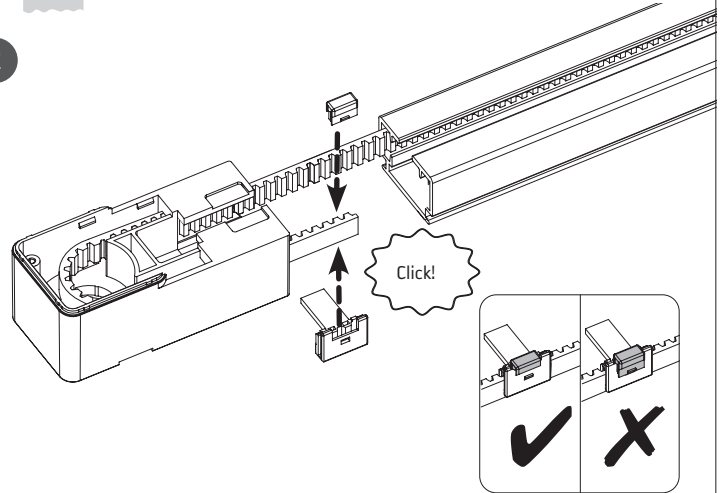


3

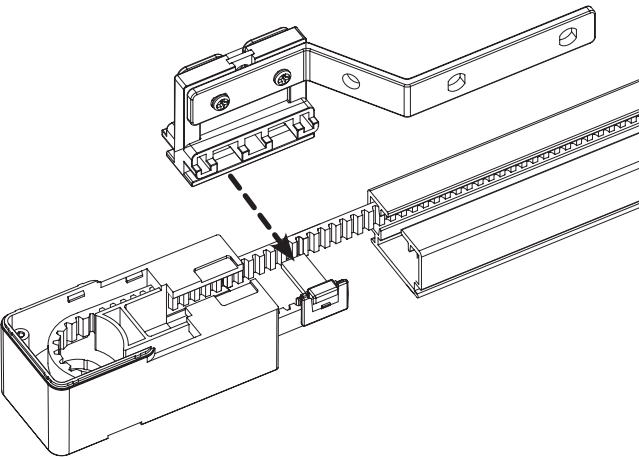


3

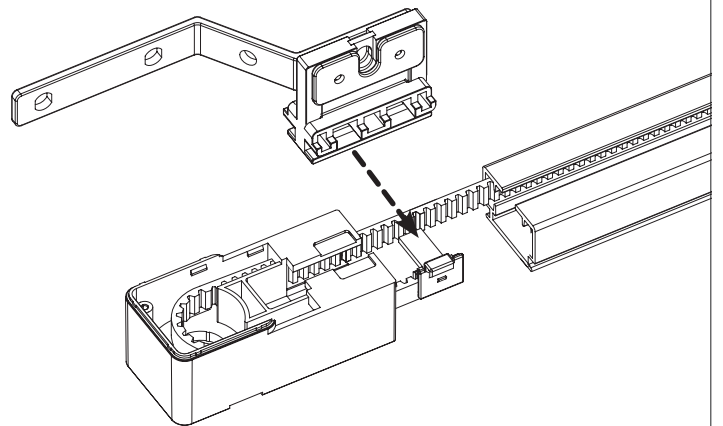



4

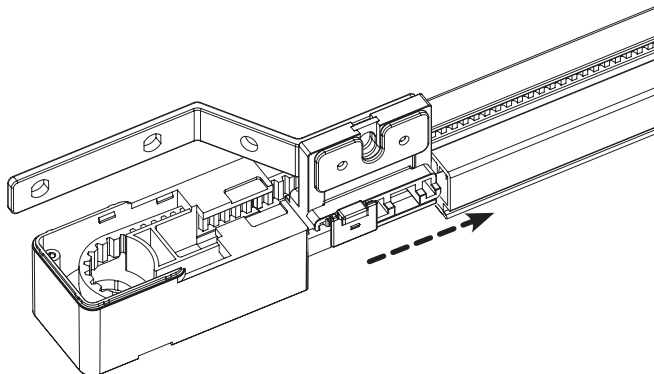




5

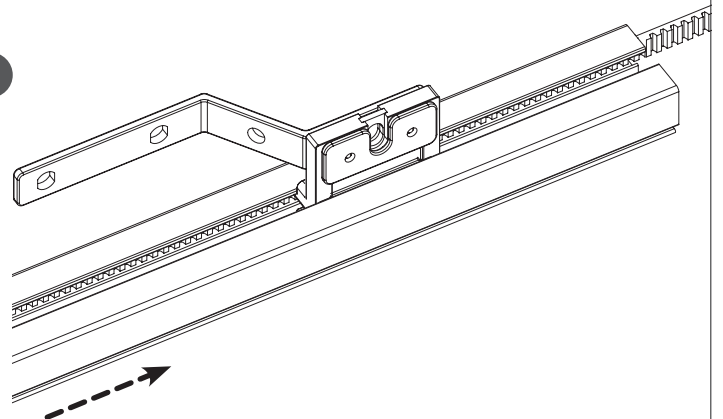


MN220053_20221019

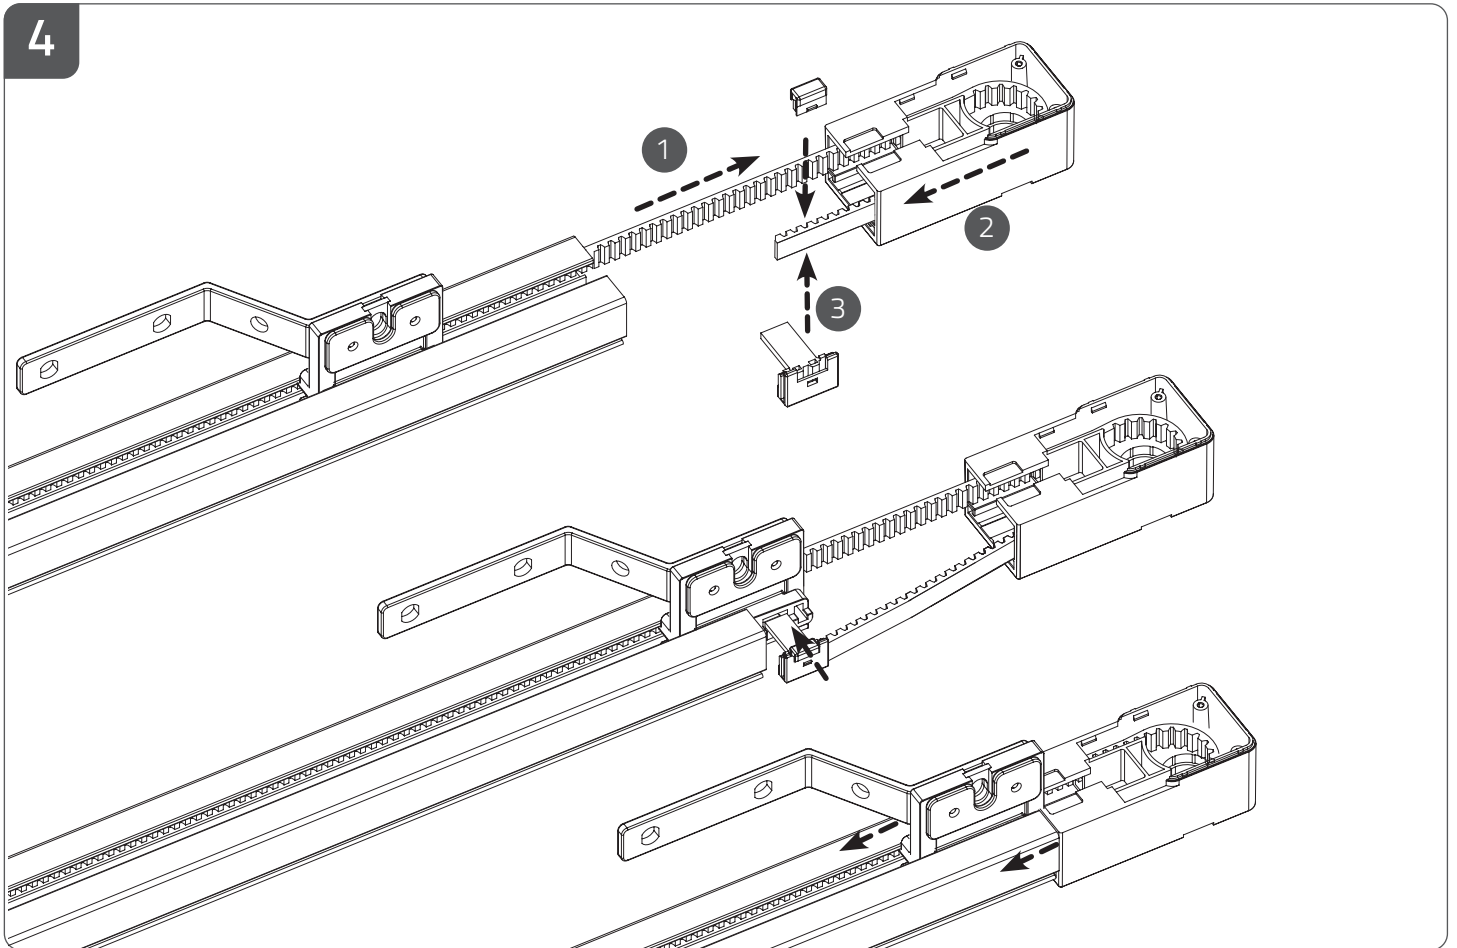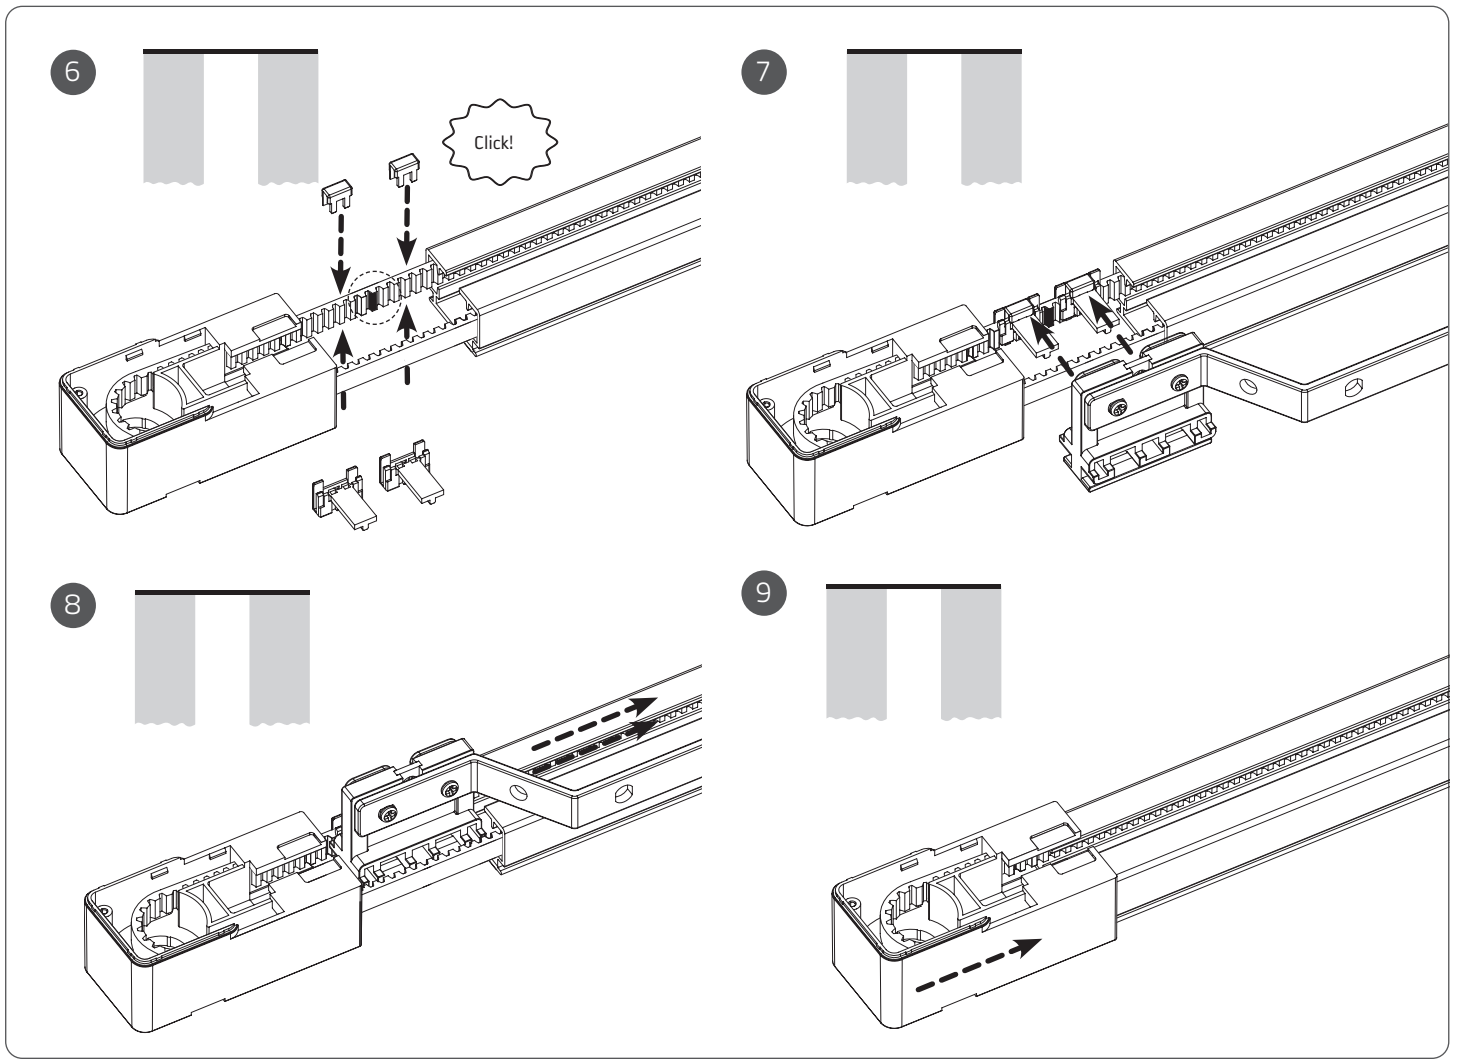


5

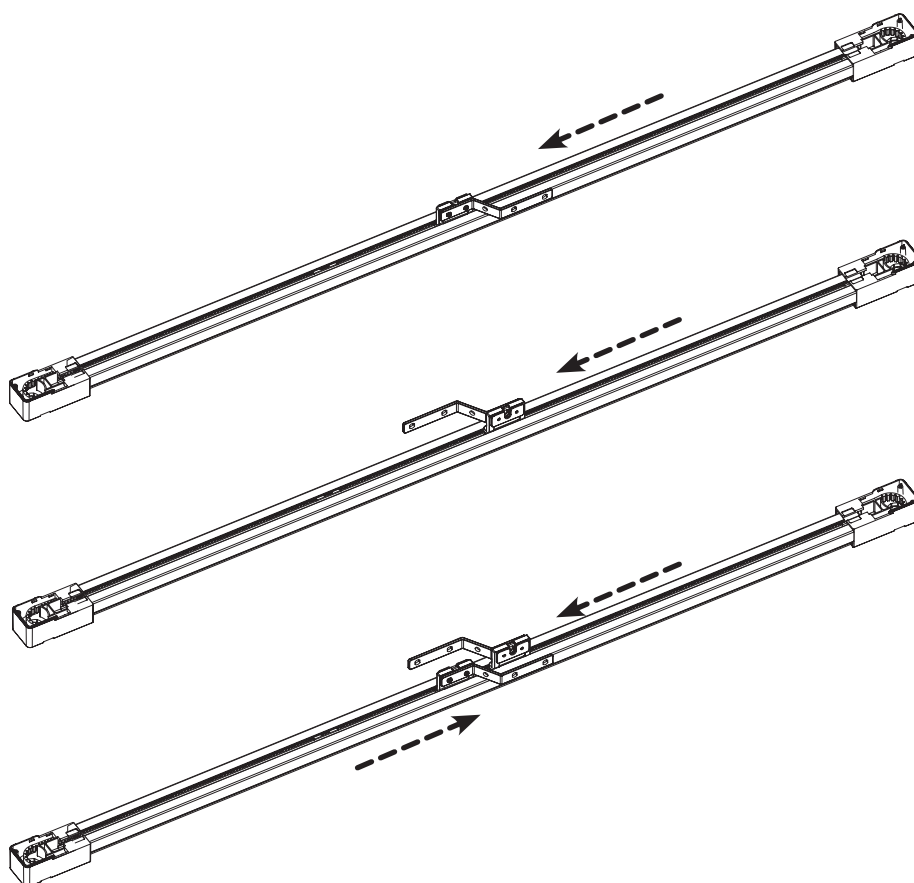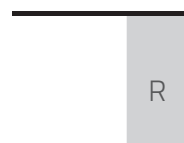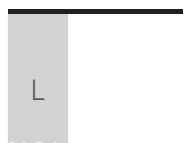

6

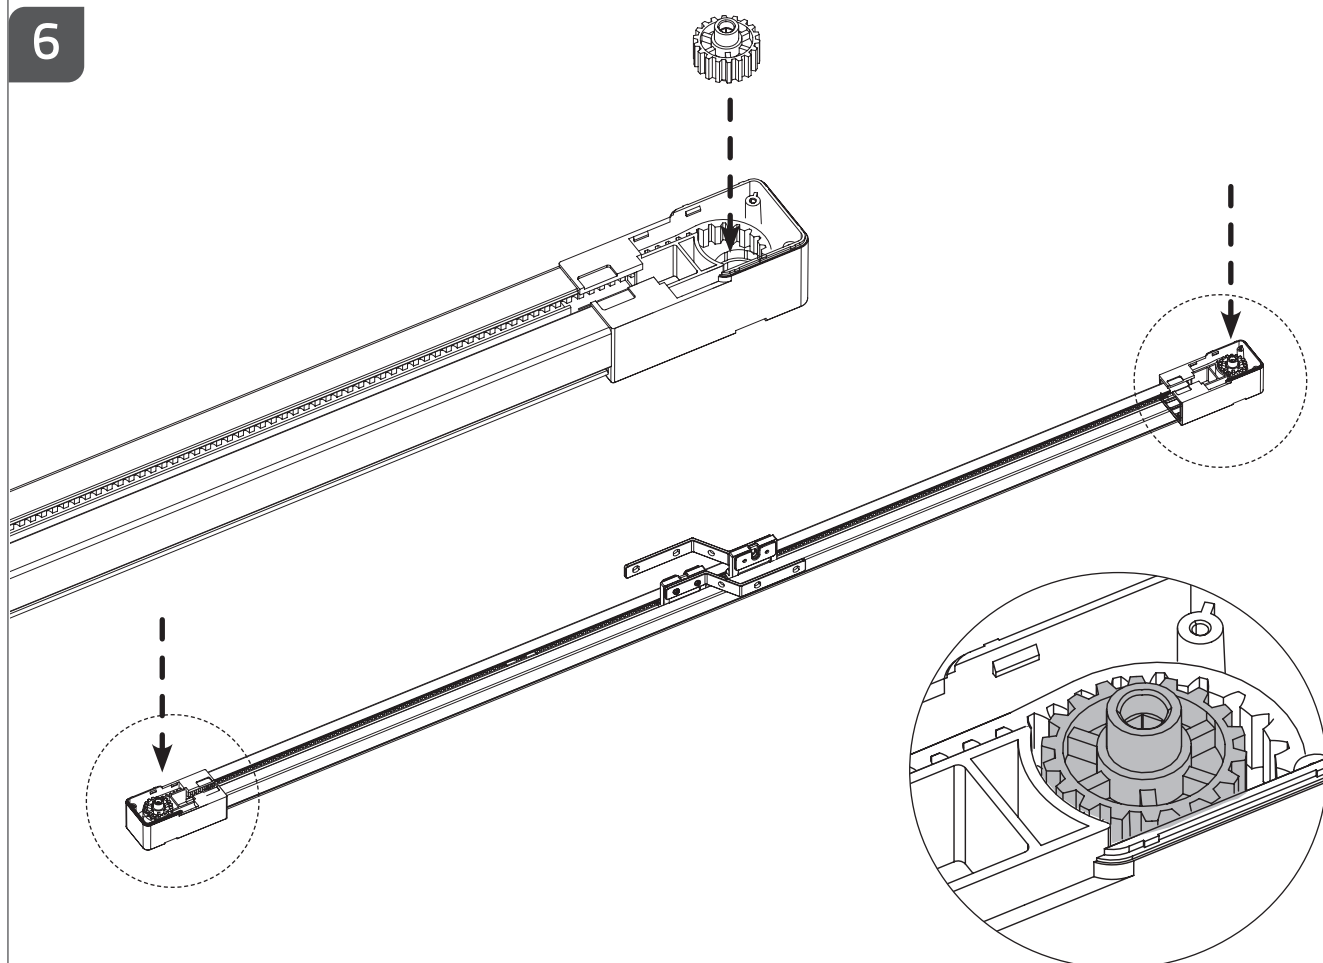


7

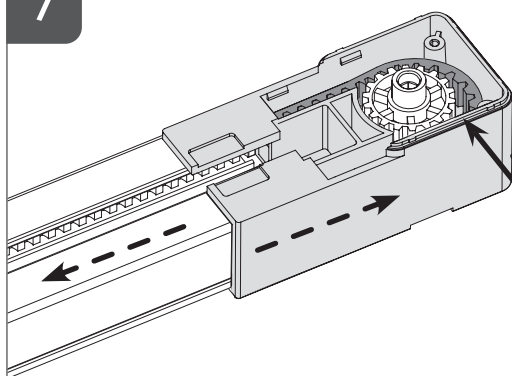


MOTOR

side without the motor

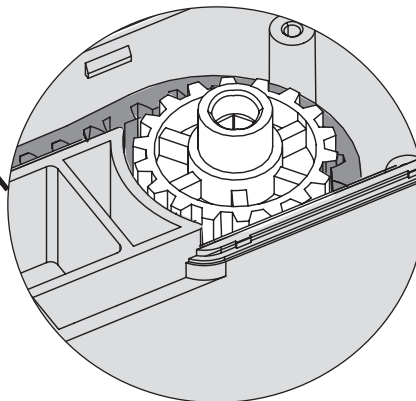

8



per 7 cm

1 x



Systemsize ___ cm


___ x





1

2




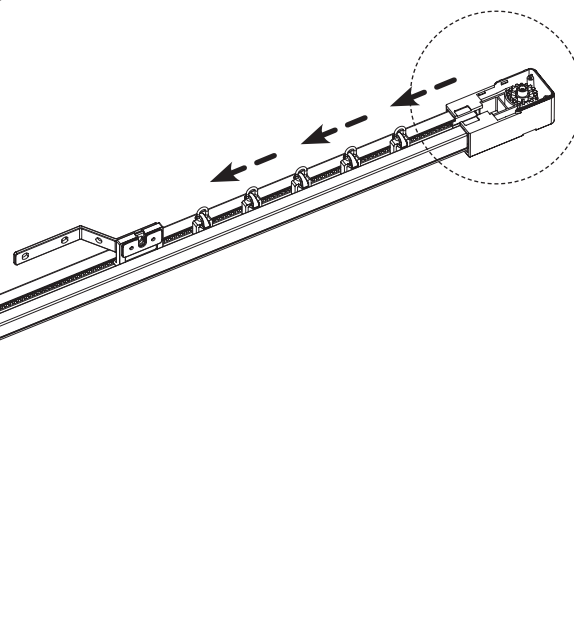
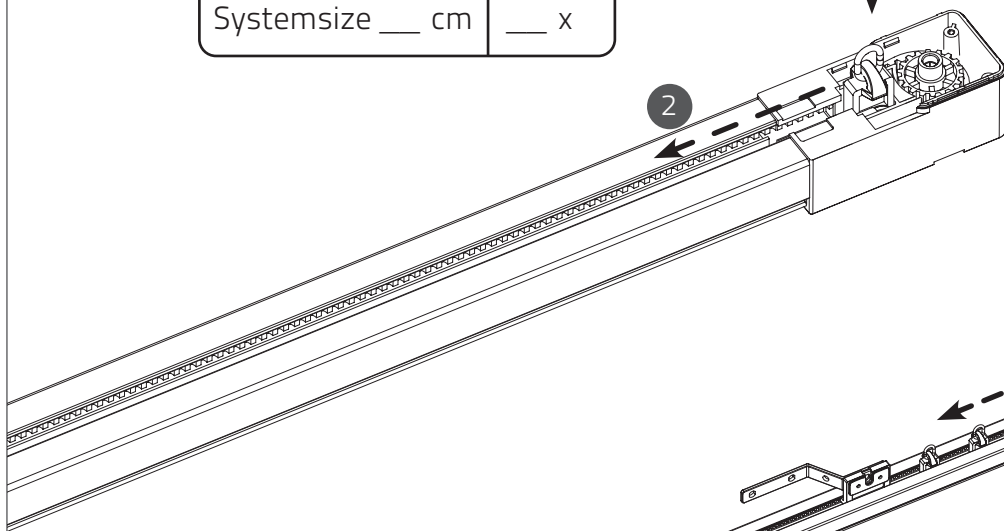


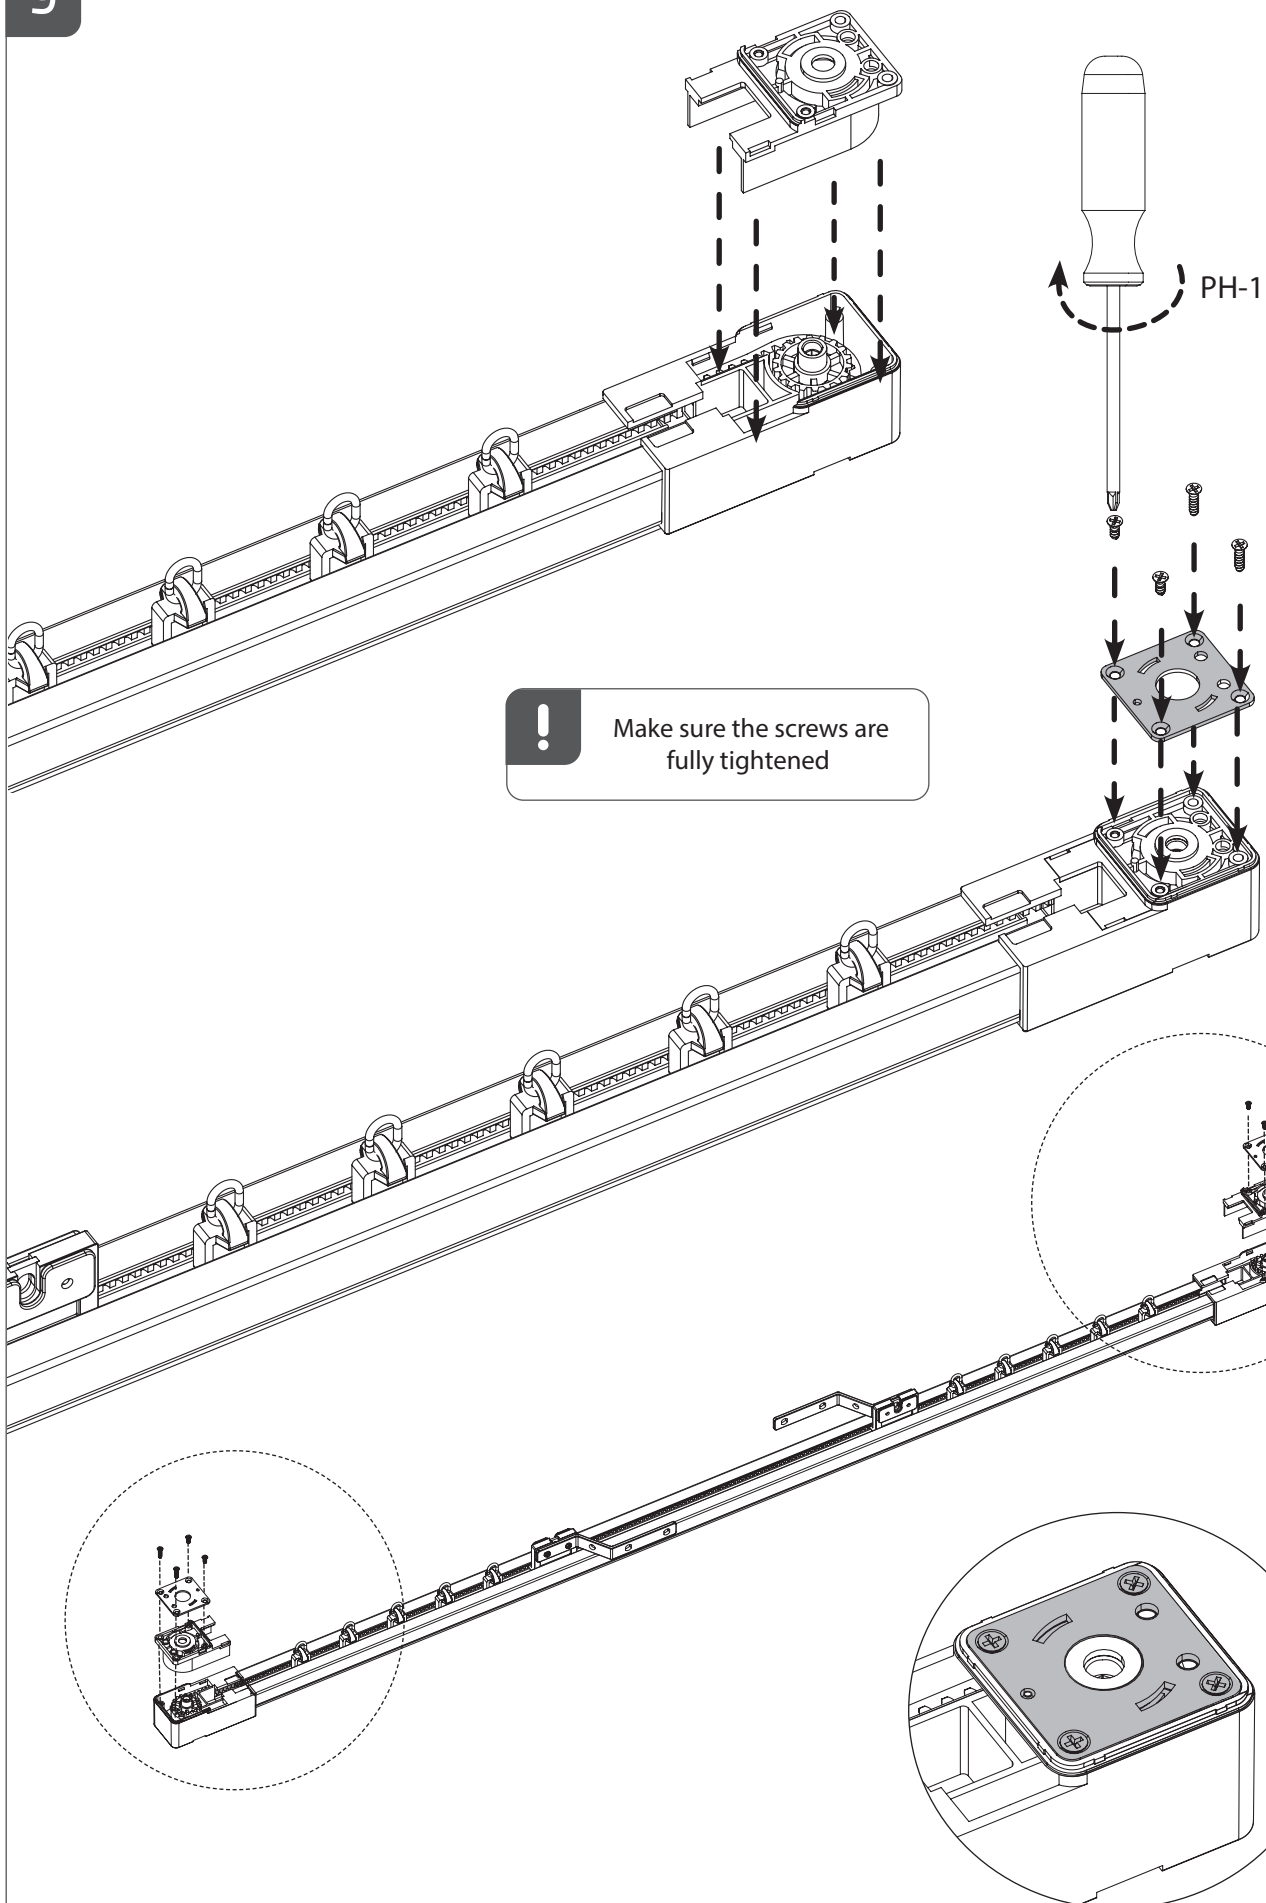


10

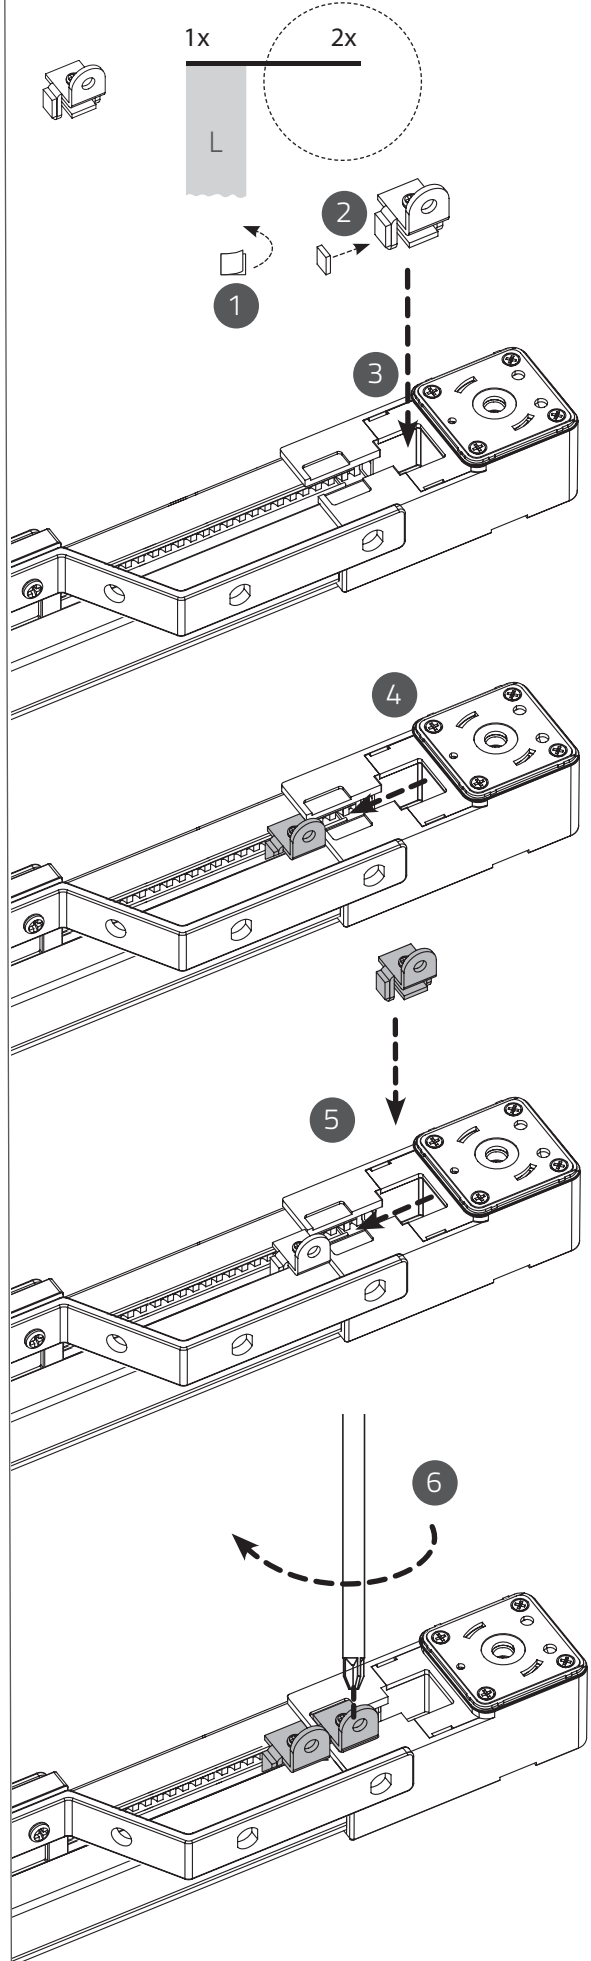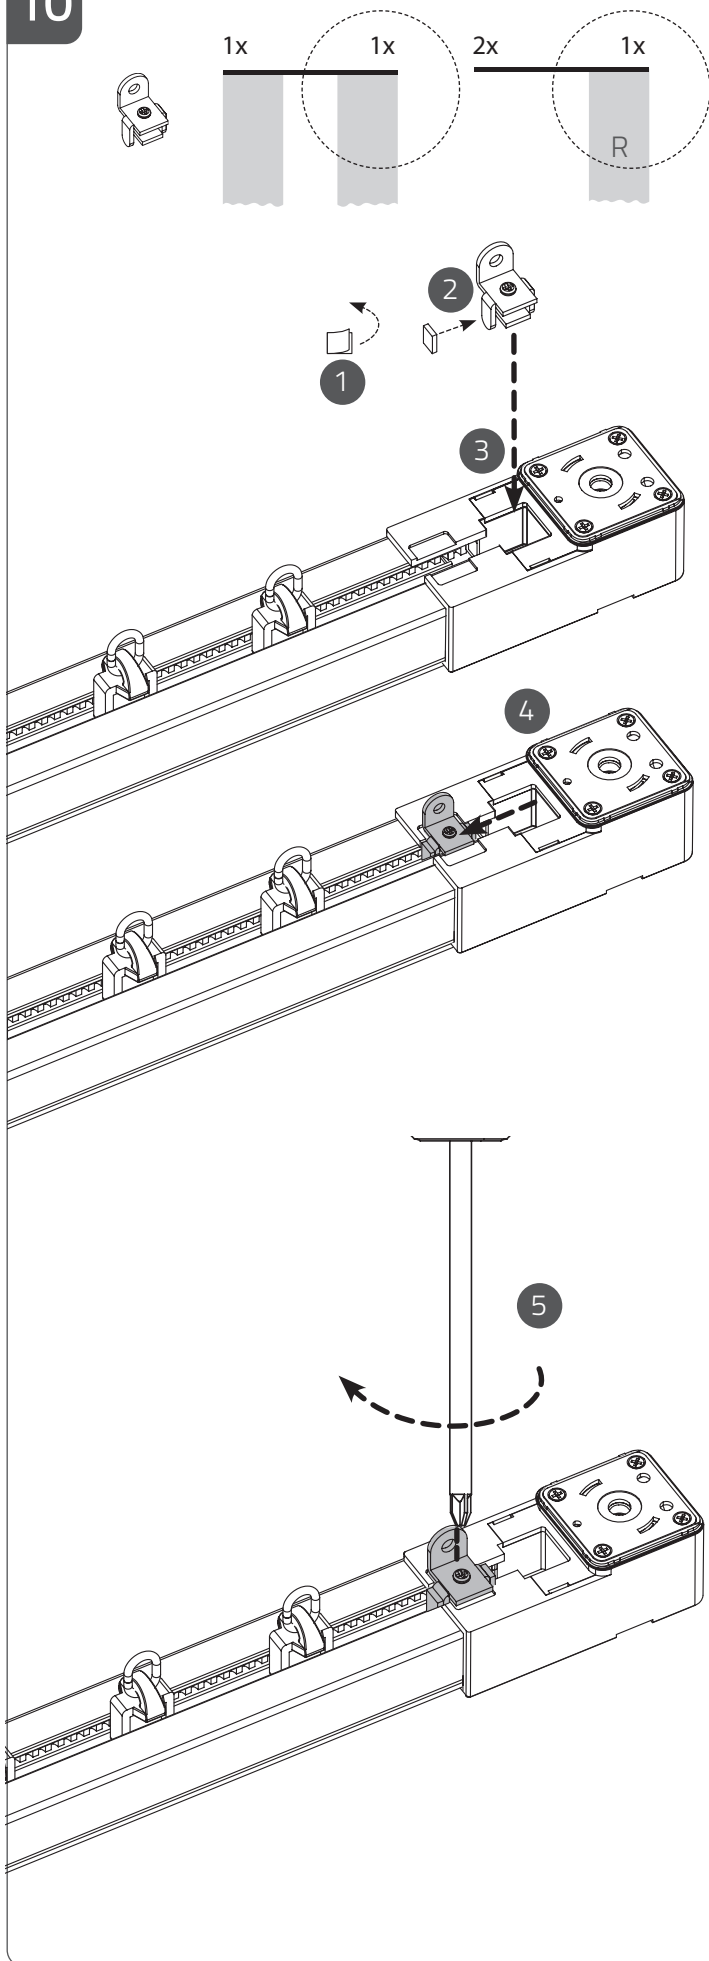


11

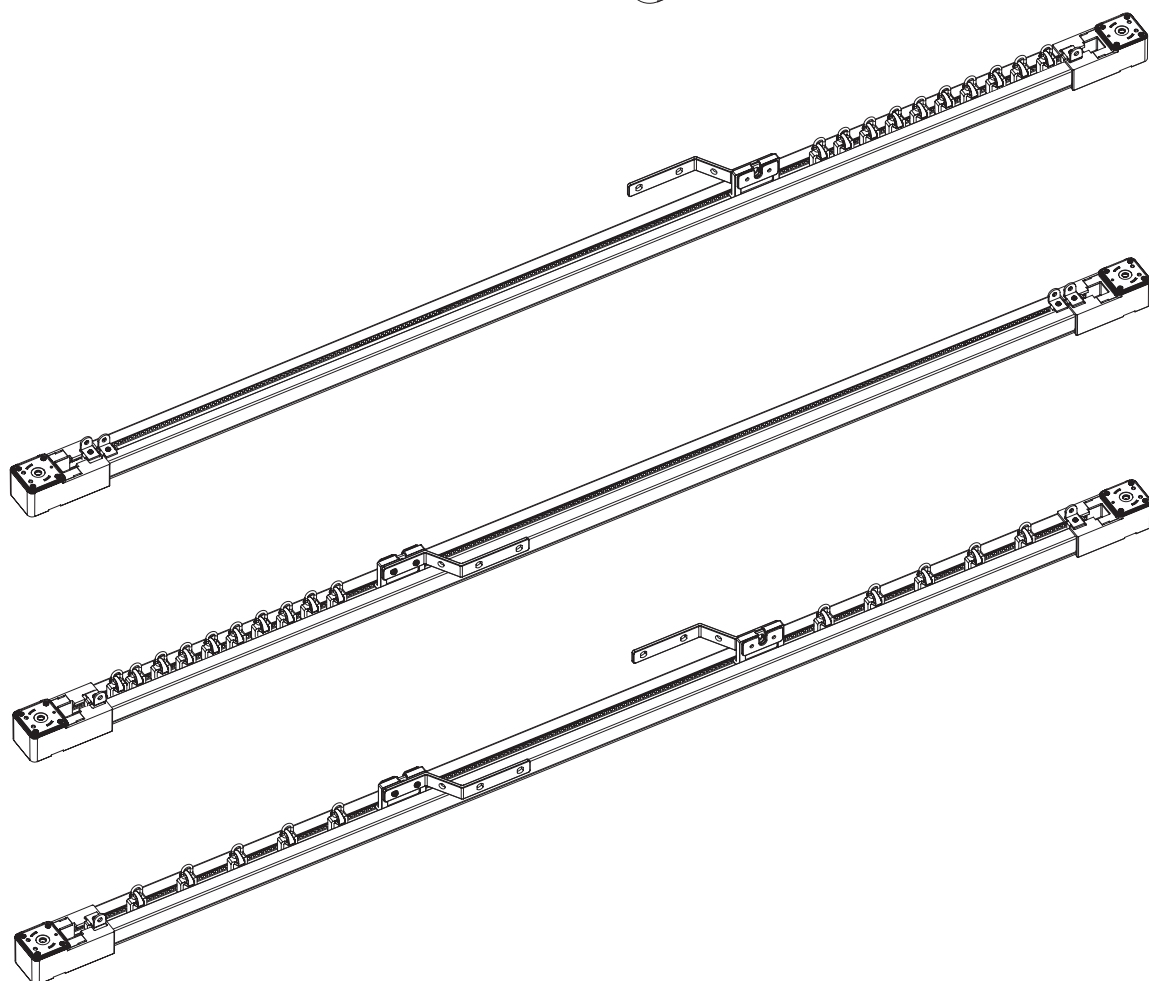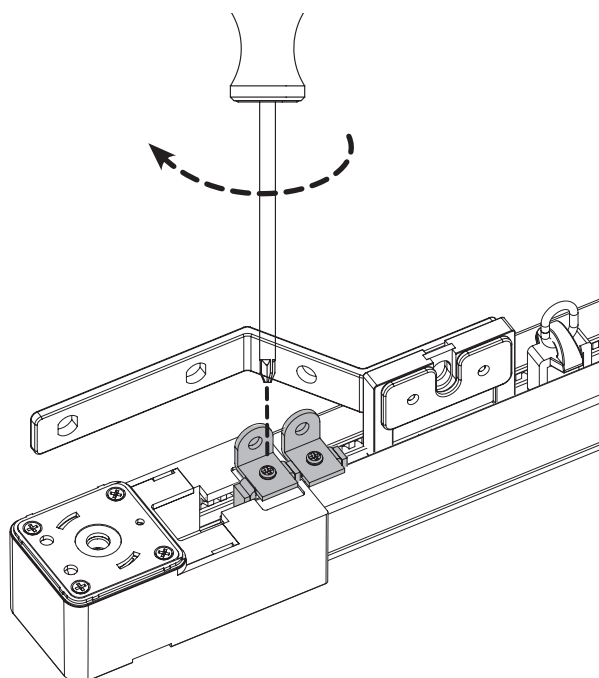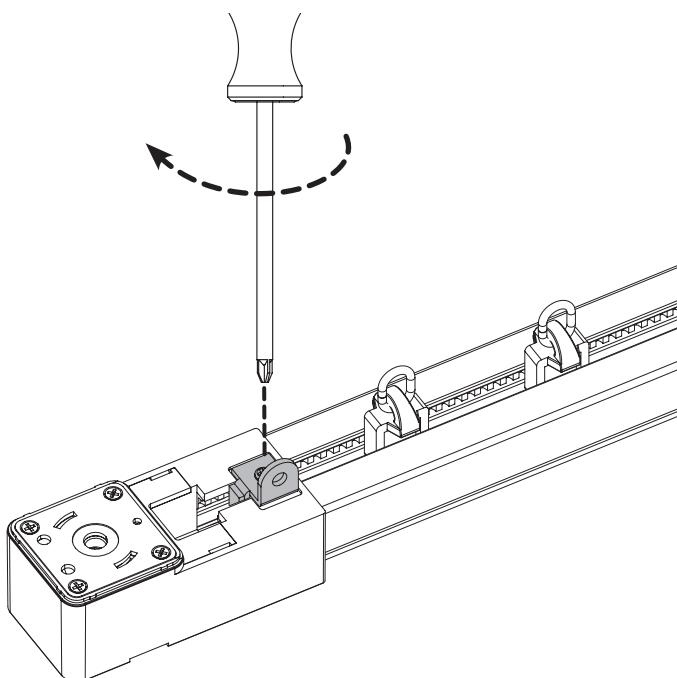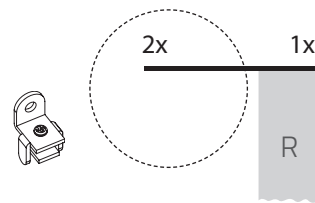
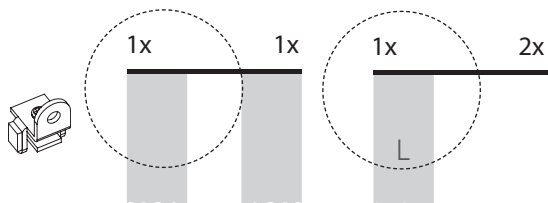


12


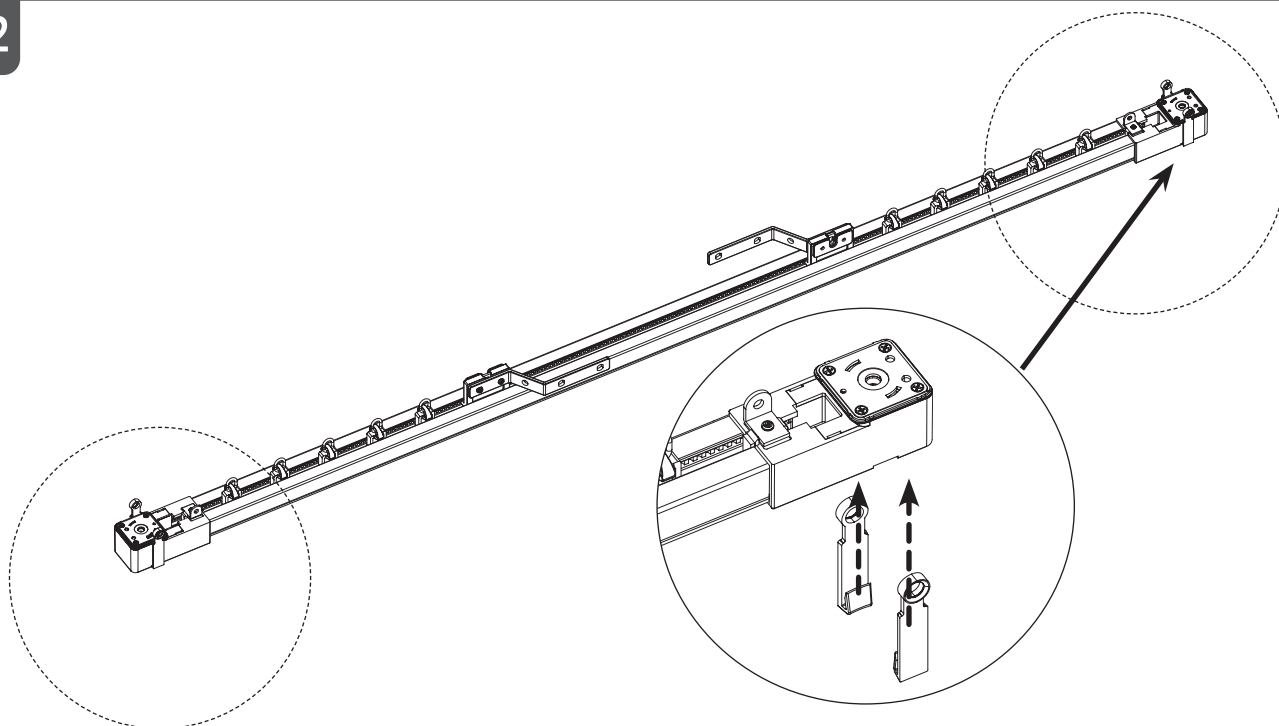


13

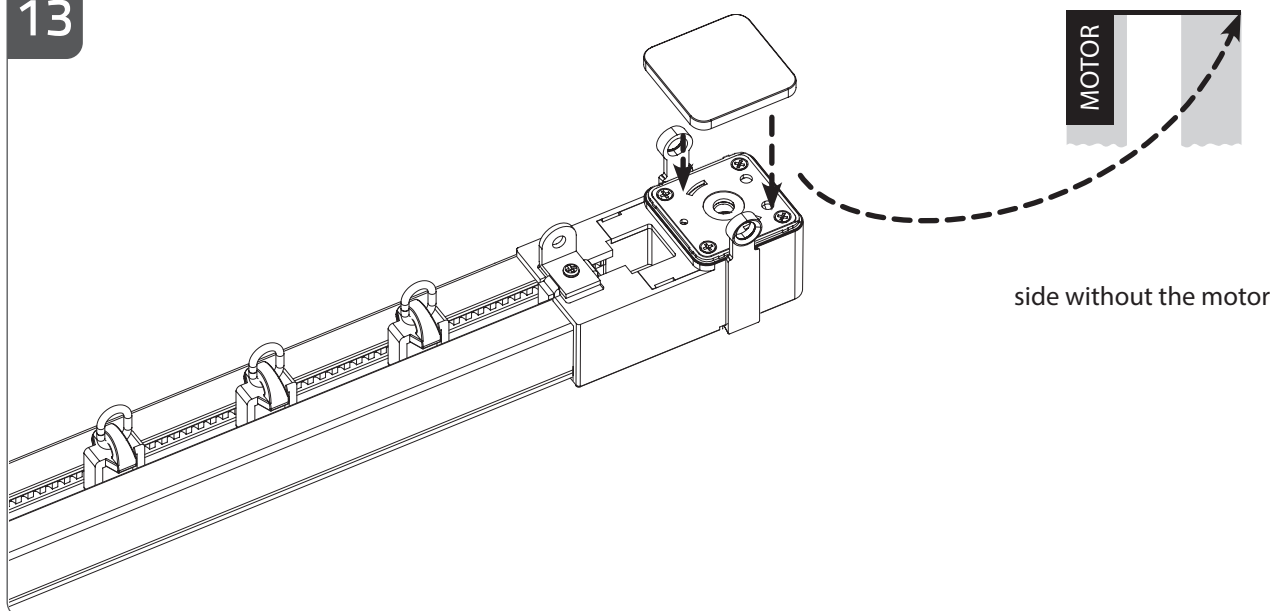


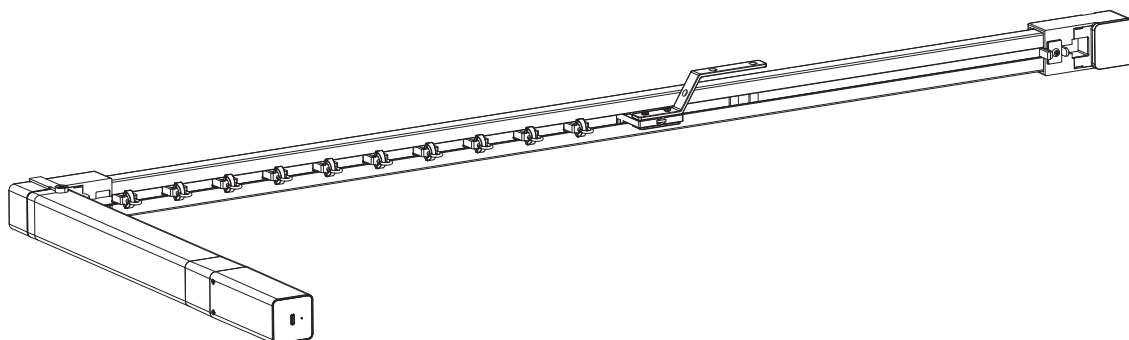



≤ 100 cm	2x
> 100 cm	3x
> 200 cm	4x
> 300 cm	5x
> 400 cm	6x

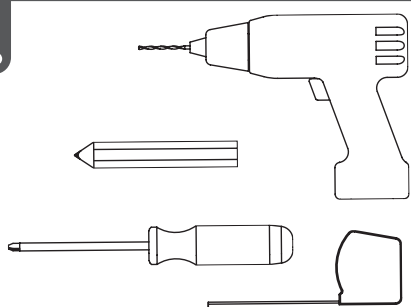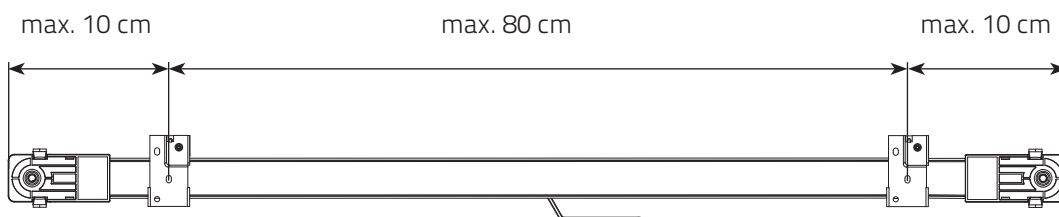


14

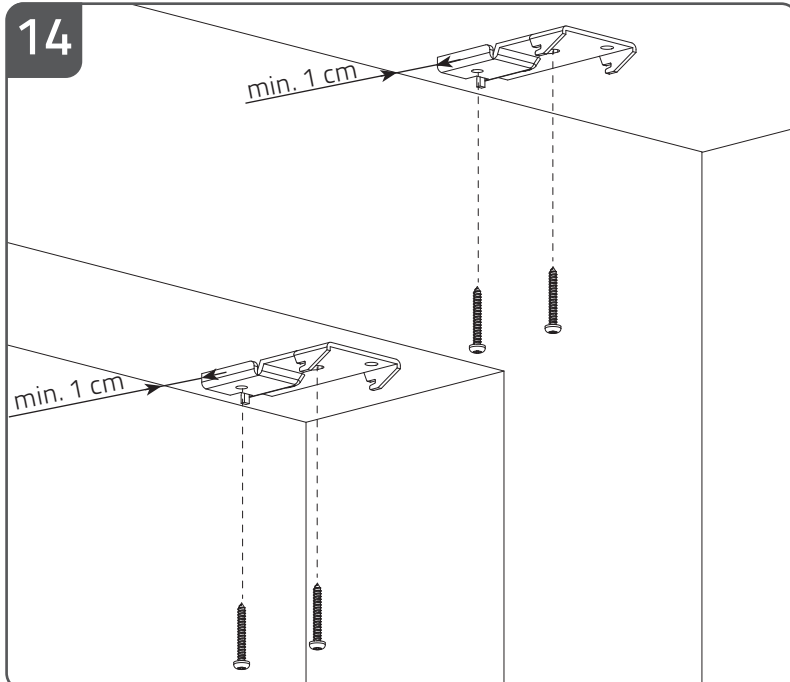

15

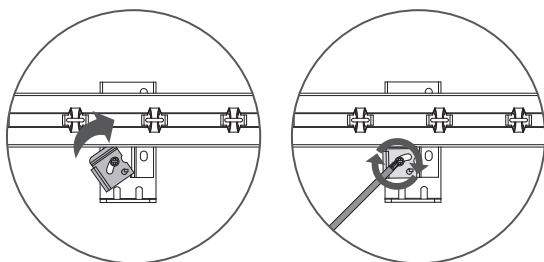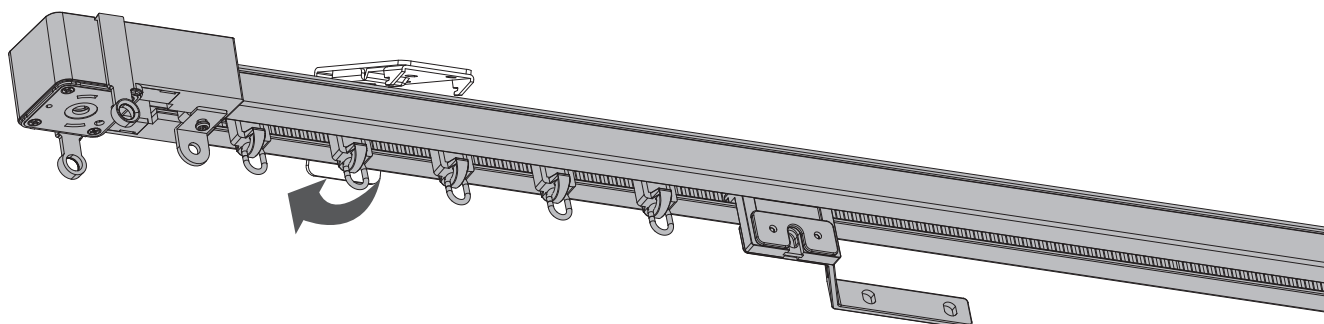



16

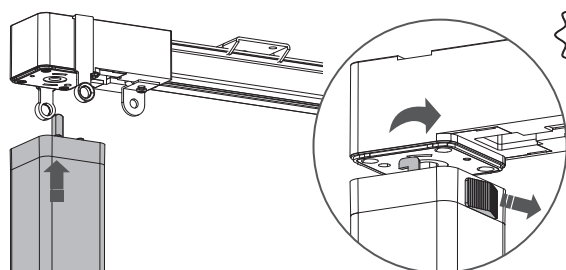

Click!





Make sure the screws are
fully tightened, before
clicking the motor

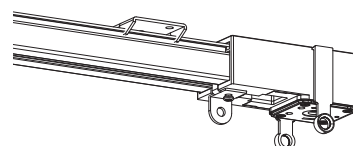

17



Position curtain hooks

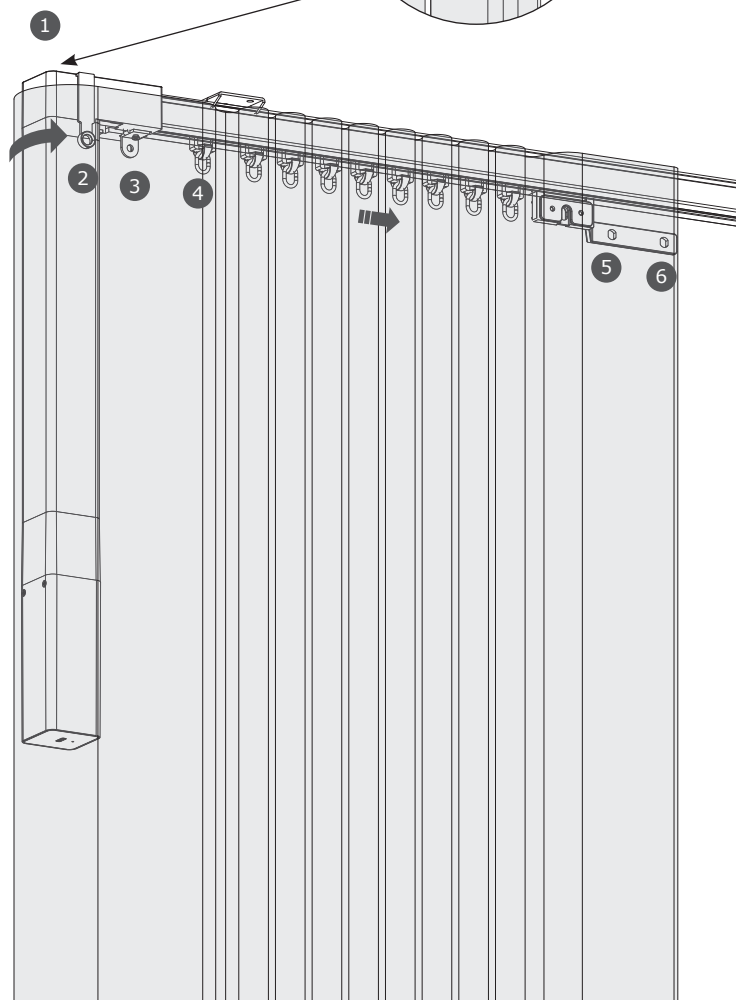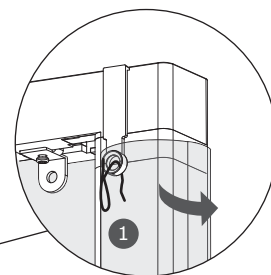

Follow the steps in the setup guide to activate the blind.

